

NVM Express[®]

Zoned Namespace Command Set Specification

Revision 1.2 August 5th, 2024

Please send comments to info@nvmexpress.org

NVM Express® Zoned Namespace Command Set Specification is available for download at https://nvmexpress.org. The NVM Express Zoned Namespace Command Set Specification, Revision 1.2 incorporates the NVM Express® Zoned Namespace Command Set Specification, Revision 1.1, ratified on June 3, 2021, ECN 001, ECN102, ECN105, ECN106, ECN108, ECN109, ECN110, ECN111, ECN113, ECN115, ECN116, ECN120, TP4055, TP4076b, TP4093a, TP4095a, TP 4097a, TP4115, TP4135, TP4146b, TP4152, TP4162a, and TP8012 (refer to the Zoned Namespace Command Set Specification, revision 1.1 change list https://nvmexpress.org/changes-in-nvme-revision-2-1 for details).

SPECIFICATION DISCLAIMER

LEGAL NOTICE:

© Copyright 2008 to 2024 NVM Express, Inc. ALL RIGHTS RESERVED.

This NVM Express Zoned Namespace Command Set Specification, Revision 1.2 is proprietary to the NVM Express, Inc. (also referred to as "Company") and/or its successors and assigns.

NOTICE TO USERS WHO ARE NVM EXPRESS, INC. MEMBERS: Members of NVM Express, Inc. have the right to use and implement this NVM Express Zoned Namespace Command Set Specification, Revision 1.2 subject, however, to the Member's continued compliance with the Company's Intellectual Property Policy and Bylaws and the Member's Participation Agreement.

NOTICE TO NON-MEMBERS OF NVM EXPRESS, INC.: If you are not a Member of NVM Express, Inc. and you have obtained a copy of this document, you only have a right to review this document or make reference to or cite this document. Any such references or citations to this document must acknowledge NVM Express, Inc. copyright ownership of this document. The proper copyright citation or reference is as follows: "© 2008 to 2024 NVM Express, Inc. ALL RIGHTS RESERVED." When making any such citations or references to this document you are not permitted to revise, alter, modify, make any derivatives of, or otherwise amend the referenced portion of this document in any way without the prior express written permission of NVM Express, Inc. Nothing contained in this document shall be deemed as granting you any kind of license to implement or use this document or the specification described therein, or any of its contents, either expressly or impliedly, or to any intellectual property owned or controlled by NVM Express, Inc., including, without limitation, any trademarks of NVM Express, Inc.

LEGAL DISCLAIMER:

THIS DOCUMENT AND THE INFORMATION CONTAINED HEREIN IS PROVIDED ON AN "AS IS" BASIS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, NVM EXPRESS, INC. (ALONG WITH THE CONTRIBUTORS TO THIS DOCUMENT) HEREBY DISCLAIM ALL REPRESENTATIONS, WARRANTIES AND/OR COVENANTS, EITHER EXPRESS OR IMPLIED, STATUTORY OR AT COMMON LAW, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, VALIDITY, AND/OR NONINFRINGEMENT.

All product names, trademarks, registered trademarks, and/or servicemarks may be claimed as the property of their respective owners.

The NVM Express® design mark is a registered trademark of NVM Express, Inc. PCIe® is a registered trademark of PCI-SIG.

NVM Express Workgroup c/o VTM, Inc. 3855 SW 153rd Drive Beaverton, OR 97003 USA info@nvmexpress.org

Table of Contents

1	Introduction	6
1.3 1.4	Overview Scope Conventions Definitions References	6 6
2	ZONED NAMESPACE COMMAND SET MODEL	9
	Theory of operation	
3	I/O COMMANDS FOR THE ZONED NAMESPACE COMMAND SET	19
3.3	Submission Queue Entry and Completion Queue Entry	19 20
4	ADMIN COMMANDS FOR THE ZONED NAMESPACE COMMAND SET	41
	Admin Command behavior for the Zoned Namespace Command Set	
5	EXTENDED CAPABILITIES	54
5.3 5.4 5.5 5.6 5.7	Directives	54 54 55 55 56
ANNE	X A. ZONED NAMESPACES HOST CONSIDERATIONS (NORMATIVE)	60
A.2 A.3 A.4	Introduction Writing to Zones Open Zone Considerations Partial Failures Capacity and Sizes	60 60 61

Table of Figures

	_
Figure 1: NVMe Family of Specifications	
Figure 2: Zones in a Zoned Namespace	
Figure 3: Summary of Zone Descriptor Attributes	
Figure 4: Zone Characteristics	
Figure 5: Write Pointer in an Empty Zone	11
Figure 6: Write Pointer in a Partially Written Zone	
Figure 7: Zone State Machine	
Figure 8: Zone Resources	15
Figure 9: I/O Controller – Zoned Namespace Command Set Support	18
Figure 10: I/O Controller - Zoned Namespace Command Set Specific Log Page Support	
Figure 11: Status Code – Command Specific Status Values, Zoned Namespace Command Set	
Figure 12: Opcodes for Zoned Namespace Command Set I/O Commands	19
Figure 13: Compare – Command Specific Status Values	
Figure 14: Copy – Command Specific Status Values	
Figure 15: Dataset Management – Command Specific Status Values	
Figure 16: Flush – Command Specific Status Values	
Figure 17: Read – Command Specific Status Values	
Figure 18: Verify – Command Specific Status Values	22
rigure 18: verily – Command Specific Status Values	22
Figure 22: Zone Append – Metadata Pointer	23
Figure 23: Zone Append – Data Pointer	23
Figure 24: Zone Append – Command Dword 2 and Dword 3	23
Figure 25: Zone Append – Command Dword 10 and Command Dword 11	23
Figure 26: Zone Append – Command Dword 12	23
Figure 27: Zone Append – Command Dword 13 if CETYPE is cleared to 0h	24
Figure 28: Zone Append - Command Dword 13 if CETYPE is non-zero	24
Figure 29: Zone Append – Command Dword 14	24
Figure 30: Zone Append – Command Dword 15	
Figure 31: Zone Append – Command Specific Status Values	
Figure 19: Write – Command Specific Status Values	
Figure 20: Write Uncorrectable – Command Specific Status Values	26
Figure 21: Write Zeroes – Command Specific Status Values	26
Figure 22: Zone Append – Metadata Pointer	27
Figure 23: Zone Append – Data Pointer	27
Figure 24: Zone Append – Command Dword 2 and Dword 3	
Figure 25: Zone Append – Command Dword 10 and Command Dword 11	21
Figure 26: Zone Append – Command Dword 12	21
Figure 27: Zone Append – Command Dword 13 if CETYPE is cleared to 0h	Z1
Figure 28: Zone Append - Command Dword 13 if CETYPE is cleared to on	20
rigure 26. Zone Append - Command Dword 13 ii CE117PE is non-zero	20
Figure 29: Zone Append – Command Dword 14	
Figure 30: Zone Append – Command Dword 15	28
Figure 31: Zone Append – Command Specific Status Values	29
Figure 32: Zone Management Receive – Data Pointer	30
Figure 33: Zone Management Receive – Command Dword 10 and Command Dword 11	
Figure 34: Zone Management Receive – Command Dword 12	30
Figure 35: Zone Management Receive – Command Dword 13	
Figure 36: Report Zones Data Structure	32
Figure 37: Extended Report Zones Data Structure	32
Figure 38: Zone Descriptor Data Structure	33
Figure 39: Zone Management Send – Command Dword 10 and Command Dword 11	
Figure 40: Zone Management Send – Command Dword 13	
Figure 41: Zone Management Send – Command Specific Status Values	39
Figure 42: Zone Management Send – Completion Queue Entry Dword 0	40
Figure 43: Asynchronous Event Information – Notice, Zoned Namespace Command Set	
Figure 44: Asynchronous Event Request – Completion Queue Entry Dword 1	
Figure 45: Asynchronous Event Configuration – Command Dword 11	
Figure 46: Log Page Identifiers	
rigure 40: Log Fage Ideliuliels	4Z
Figure 47: Changed Zone List Log Page	
Figure 48: CNS Values	
Figure 49: I/O Command Set Specific Identify Namespace Data Structure for the Zoned Namespace Comm	
Set	
Figure 50: LBA Format Extension Data Structure	
Figure 51: I/O Command Set Specific Identify Controller Data Structure for the Zoned Namespace Command	
Figure 52: I/O Zoned Namespace Command Set Specification Version Descriptor Field Values	
Figure 53: Command Dword 11 - CNS Specific Identifier	49

NVM Express® Zoned Namespace Command Set Specification, Revision 1.2

Figure 54: I/O Namespace Management – Host Software Specific Fields	51
Figure 55: Sanitize Behavior for the Zoned Namespace Command Set	53
Figure 56: Command Behavior in the Presence of a Reservation	54
Figure 57: Write Pointer in a Partially Written Zone with Associated ZRWA	56
Figure 58: Flush Operation	58
Figure 59: ZRWA at End of Zone	58
Figure 60: Implicit ZRWA Flush Range	
Figure 61: Implicit ZRWA Flush Variables	59
Figure 62: Size and Capacity Fields	
Figure 63: Zone Size Relationships	62

1 Introduction

1.1 Overview


The NVM Express® (NVMe®) Base Specification defines an interface for host software to communicate with a non-volatile memory subsystem (NVM subsystem) over a variety of memory-based transports and message-based transports.

This document defines a specific NVMe I/O Command Set, the Zoned Namespace Command Set, which extends the NVM Express Base Specification and the NVM Command Set Specification.

1.2 Scope

Figure 1 shows the relationship of the NVM Express® Zoned Namespace Command Set Specification to other specifications within the NVMe Family of Specifications.

Figure 1: NVMe Family of Specifications

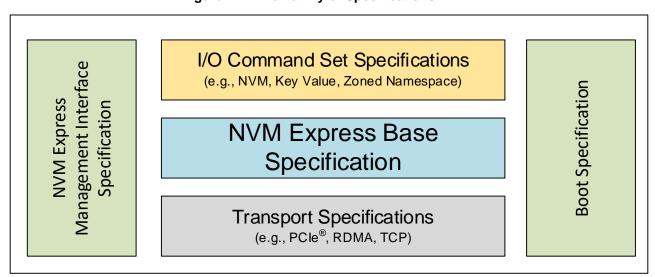

This specification supplements the NVM Express Base Specification. This specification defines additional data structures, features, log pages, commands, and status values. This specification also defines extensions to existing data structures, features, log pages, commands, and status values. This specification defines requirements and behaviors that are specific to the Zoned Namespace Command Set. Functionality that is applicable generally to NVMe or that is applicable across multiple I/O Command Sets is defined in the NVM Express Base Specification.

If a conflict arises among requirements defined in different specifications, then a lower-numbered specification in the following list shall take precedence over a higher-numbered specification:

- 1. Non-NVMe specifications
- 2. NVM Express Base Specification
- 3. NVMe transport specifications
- 4. NVMe I/O command set specifications
- 5. NVM Express Management Interface Specification
- 6. NVM Express® Boot Specification

1.3 Conventions

This specification conforms to the Conventions section, Keywords section, and Byte, Word, and Dword Relationships section of the NVM Express Base Specification.

1.4 Definitions

1.4.1 Definitions from the NVM Express Base Specification

This specification uses the definitions in the NVM Express Base Specification.

1.4.2 Terms in the NVM Express Base Specification specified in the Zoned Namespace Command Set

The following terms used in this specification and the NVM Express Base Specification are as defined in this section.

1.4.2.1 Endurance Group Host Read Command

An Endurance Group Host Read Command as defined in the NVM Command Set Specification.

1.4.2.2 Format Index

A value used to index into the LBA Formats list (refer to the NVM Command Set Specification), the Extended LBA Formats list (refer to the NVM Command Set Specification), and the LBA Format Extensions list (refer to Figure 59).

1.4.2.3 Identify Controller data structures

All controller data structures that are able to be retrieved via the Identify command for the Zoned Namespace Command Set:

- the Identify Controller data structure (refer to the NVM Express Base Specification);
- the I/O Command Set specific Identify Controller data structure for the NVM Command Set (refer to the NVM Command Set Specification); and
- the I/O Command Set specific Identify Controller data structure for the Zoned Namespace Command Set (refer to section 4.1.5.2).

1.4.2.4 Identify Namespace data structures

All namespace data structures that are able to be retrieved via the Identify command for the Zoned Namespace Set (refer to section 4.1.5.4 for specific field settings for the Identify command):

- the I/O Command Set Independent Identify Namespace data structure (refer to the NVM Express Base Specification);
- Identify Namespace data structure (refer to NVM Command Set Specification);
- the I/O Command Set specific Identify Namespace data structure for the NVM Command Set (refer to section NVM Command Set Specification); and
- the I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set (refer to section 4.1.5.1).

1.4.2.5 SMART Data Units Read Command

A SMART Data Units Read Command as defined in the NVM Command Set Specification.

1.4.2.6 SMART Host Read Command

A SMART Host Read Command as defined in the NVM Command Set Specification.

1.4.2.7 User Data Out Command

A User Data Out Command as defined in the NVM Command Set Specification and the Zone Append command.

1.4.3 Definitions from the NVM Command Set Specification

The following terms are defined in the NVM Command Set Specification and are used in this specification:

- a) LBA range
- b) logical block
- c) logical block address (LBA)
- d) User Data Format

1.4.4 Definitions specific to the Zoned Namespace Command Set

This section defines terms that are specific to this specification.

1.4.4.1 active zone

A zone that is in the ZSIO:Implicitly Opened state, the ZSEO:Explicitly Opened state, or the ZSC:Closed state.

1.4.4.2 Address-Specific Write Command

A Write command, Write Uncorrectable command, Write Zeroes command, or Copy command. Address-Specific Write Commands specify a range of logical block addresses in command parameters as part of the submission queue entry or in data structures pointed to by the command parameters.

1.4.4.3 Ceiling

A function where, for real number x, ceiling(x) is equal to x rounded up to the nearest integer value. If x is an integer then ceiling(x) is equal to x.

1.4.4.4 open zone

A zone that is in the ZSIO:Implicitly Opened state, the ZSEO:Explicitly Opened state.

1.4.4.5 write operation

An operation initiated by a Write command, a Write Zeroes command, a Write Uncorrectable command, a Copy command, or a Zone Append command.

1.4.4.6 zone

A contiguous range of logical block addresses that are managed as a single unit.

1.4.4.7 Zone Descriptor

The data structure that contains information about a zone.

1.4.4.8 Zone Descriptor Extension

Host defined data that is associated with a zone.

1.4.4.9 zoned namespace

A namespace that is divided into zones and is associated with the Zoned Namespace Command Set.

1.4.4.10 Zone Random Write Area (ZRWA)

An area of non-volatile medium with a sliding set of assigned LBAs which start at the write pointer for the associated zone.

1.5 References

NVM Express® Base Specification, Revision 2.1. Available from https://www.nvmexpress.org.

NVMe® NVM Command Set Specification, Revision 1.1. Available from https://www.nvmexpress.org.

2 Zoned Namespace Command Set Model

The NVM Express Base Specification defines an interface for host software to communicate with a non-volatile memory subsystem (NVM subsystem). This specification defines additional functionality for the Zoned Namespace Command Set.

The Command Set Identifier (CSI) value for this Command Set is 02h.

2.1 Theory of operation

This section defines the operation of the Zoned Namespace Command Set.


2.1.1 Namespaces

A namespace is a set of resources that may be accessed by a host and is defined in the NVM Express Base Specification and in the NVM Command Set Specification, as modified by this specification. A namespace has an associated namespace identifier that a host uses to access that namespace.

A zoned namespace is a namespace that is associated with the Zoned Namespace Command Set. A zoned namespace is divided into a set of equally-sized zones, which are contiguous non-overlapping ranges of logical block addresses. Figure 2 shows a zoned namespace with x zones and z LBAs where LBA 0 is the lowest LBA of zone 0, LBA z-1 is the highest LBA of zone x-1, and for Zone 1, m is the lowest LBA and n-1 is its highest LBA.

Figure 2: Zones in a Zoned Namespace

	Zone 0		Zone 1	 Zone <i>x</i> -1	
LBA 0	LBA 0 LBA 1			LBA <i>z</i> -1	



The Zoned Namespace Command Set is based on the NVM Command Set (refer to the NVM Command Set Specification).

Each zone has an associated Zone Descriptor that contains a set of attributes. A Zone Management Receive command may be used to retrieve one or more Zone Descriptors.

2.1.1.1 Zone Descriptor

The attributes associated with a zone are summarized in Figure 3. These attributes are reported in the Zone Descriptor data structure as defined in Figure 48.

Figure 3: Summary of Zone Descriptor Attributes

Attribute	Description	
	The zone type attribute defines the rules for reading and writ	ing to a zone.
Zone Type	Zone Type	Reference Section
	Sequential Write Required	2.1.1.2.1

Figure 3: Summary of Zone Descriptor Attributes

Attribute	Description			
	Each zone has an associated state machine. That state machine has a set of states and each state, together with the zone type, defines the operational characteristics of that zone.			
	Zone Type	Zone State	Reference Section	
		ZSE:Empty	2.1.1.3.1	
Zone State		ZSIO:Implicitly Opened	2.1.1.3.2	
		ZSEO:Explicitly Opened	2.1.1.3.3	
	Sequential Write Required	ZSC:Closed	2.1.1.3.4	
		ZSF:Full	2.1.1.3.5	
		ZSRO:Read Only	2.1.1.3.6	
		ZSO:Offline	2.1.1.3.7	
	The Write Pointer attribute defines the lowest numbered writeable logical block address in			
Write Pointer	that zone. The validity of the write pointer is zone state specific and is defined per zone type			
	(refer to section 2.1.1.2).			
Zone Start Logical	The Zone Start Logical Block Address (ZSLBA) attribute defines the lowest logical block			
Block Address	address for that zone.		• • •	
Zone Capacity	The Zone Capacity attribute de			
Zone Descriptor			validity of the Zone Descriptor	
Extension Valid	Extension data of that zone. Re			
Reset Zone	The Reset Zone Recommended attribute indicates that the controller recommends that the			
Recommended	host resets that zone. Refer to section 5.4.			
Finish Zone	The Finish Zone Recommended attribute indicates that the controller recommends that the			
Recommended	host finishes that zone. Refer to section 5.5.			
Zone Finished by	The Zone Finished by Controller attribute indicates that the controller finished that zone due			
Controller	to a Zone Active Excursion. Refer to section 5.6.			

2.1.1.2 Zone Types

2.1.1.2.1 Sequential Write Required Zones

A zone type of Sequential Write Required requires the set of logical block addresses of a zone to be written sequentially.

2.1.1.2.1.1 Writing in Sequential Write Required Zones

The following commands may be used to write to logical blocks in a specific zone of zone type Sequential Write Required:

- Write command:
- Write Zeroes command;
- Write Uncorrectable command;
- Copy command; and
- Zone Append command, if no ZRWA is associated with the zone.

A write pointer is maintained for each zone in the zoned namespace that indicates the lowest-numbered writeable logical block address in that zone. The write pointer is valid for a subset of the zone states as defined in Figure 4.

Figure 4: Zone Characteristics

		Zone Characteristics		
State	Valid Write Pointer 1	Active Resources 2	Open Resources ²	
ZSE:Empty	Yes	No	No	
ZSIO:Implicitly Opened	Yes	Yes	Yes	
ZSEO:Explicitly Opened	Yes	Yes	Yes	
ZSC:Closed	Yes	Yes	No	
ZSF:Full	No	No	No	
ZSRO:Read Only	No	No	No	

Figure 4: Zone Characteristics

	Zone Characteristics		
State	Valid Write Pointer ¹	Active Resources ²	Open Resources ²
ZSO:Offline	No	No	No

Notes:

- 1. A valid write pointer (i.e., Yes) indicates that the Write Pointer field in the Zone Attributes field for that zone contains a valid logical block address. An invalid write pointer (i.e., No) provides no information.
- 2. Resources associated with a zone are defined in section 2.1.1.4.

The host may use the Zone Management Receive command to determine the current write pointer for a zone.

The Zone Management Send command with a Zone Send Action of Reset Zone sets the write pointer to the ZSLBA for that zone.


Figure 5 shows an example of a zone in the ZSE:Empty state. LBA m is the ZSLBA attribute, the write pointer indicates ZSLBA, and n-1 is the highest LBA of the zone.

Figure 5: Write Pointer in an Empty Zone



Figure 6 shows an example of a zone in the ZSIO:Implicitly Opened state, the ZSEO:Explicitly Opened state, or the ZSC:Closed state, that has had one or more logical blocks written. The write pointer, indicated by LBA w, is the lowest-numbered writeable LBA and n-1 is the highest-numbered LBA of the zone.

Figure 6: Write Pointer in a Partially Written Zone



The controller shall abort a command that writes to a zone that is in the ZSF:Full state with a status code of Zone Is Full.

The controller shall abort a command that writes to a zone that is in the ZSRO:Read Only state, with a status code of Zone Is Read Only.

The controller shall abort a command that writes to a zone that is in the ZSO:Offline state, with a status code of Zone Is Offline.

For a zone associated with a ZRWA (refer to section 5.7), commands shall be processed as defined in section 5.7.

For a zone not associated with a ZRWA and which has a valid write pointer, commands shall be processed as follows:

- a) if the controller:
 - a. successfully writes to all logical blocks specified by a write operation, then the write pointer shall be increased by the number of logical blocks written on successful completion of that write operation; and
 - b. is not able to successfully write to all logical blocks specified by a write operation, then the write pointer shall:

- i. be set to a value within the range of LBAs specified in that write operation;
- ii. be set to one greater than the last LBA in the range of LBAs specified in that write operation; or
- iii. become invalid (i.e., due to transitioning to the ZSRO:Read Only state or the ZSO:Offline state, or due to a Zone Active Excursion (refer to section 5.6));
- b) if an Address-Specific Write Command specifies a Starting LBA field that is not equal to the write pointer for that zone, then the controller shall abort that command with a status code of Zone Invalid Write; and
- c) if a Zone Append command specifies a ZSLBA that is not the lowest logical block address in that zone, then the controller shall abort that command with a status code of Invalid Field in Command, as described in section 3.4.1.

The controller shall abort a command that initiates a write operation that has a starting LBA in one zone, and for which the Number of Logical blocks exceeds the remaining number of logical blocks in that zone, with a status code of Zone Boundary Error.

2.1.1.2.1.2 Reading in Sequential Write Required Zones

If the zone for a User Data Read Access Command is:

- a) in the ZSO:Offline state, then that command shall be aborted with a status code of Zone Is Offline; or
- b) in any other state, then that User Data Read Access Command is performed as described in this section, in section 2.1.1.5, and in the Deallocated or Unwritten Logical Blocks section in the NVM Command Set Specification.

If the Read Across Zone Boundaries bit is set to '1' in the Zoned Namespace Command Set specific Identify Namespace data structure (refer to Figure 59), then User Data Read Access Commands are allowed to specify an LBA range containing logical blocks in more than one zone.

If the Read Across Zone Boundaries bit is cleared to '0', then commands that perform read operations that specify an LBA range containing logical blocks in more than one zone shall be aborted with a status code of Zone Boundary Error.

2.1.1.3 Zone State Machine

There is a state machine associated with each zone. The state machine controls the operational characteristics of each zone. The state machine consists of the following states: ZSE:Empty, ZSIO:Implicitly Opened, ZSEO:Explicitly Opened, ZSC:Closed, ZSF:Full, ZSRO:Read Only, and ZSO:Offline.

The initial state of a zone state machine is set as a result of:

- a) an NVM Subsystem Reset; or
- b) all controllers in the NVM subsystem reporting controller shutdown processing complete (i.e., the Shutdown Type (ST) bit cleared to '0' and the Shutdown Status (SHST) field set to 10b, refer to the NVM Express Base Specification).

The initial state for each zone is the:

- a) ZSE:Empty state if:
 - 1. the write pointer is valid;
 - 2. the write pointer points to the lowest LBA in the zone;
 - 3. the Zone Descriptor Extension Valid bit is cleared to '0'; and
 - 4. the ZRWA, if any, associated with the zone contains no user data;
- b) ZSC:Closed state if the write pointer is valid and:
 - 1. the write pointer does not point to the lowest LBA in the zone;
 - 2. the Zone Descriptor Extension Valid bit is set to '1'; or
 - 3. the ZRWA, if any, associated with the zone contains user data;
- c) ZSF:Full state if:
 - 1. the most recent state was the ZSF:Full; or

- the zone state was transitioned to the ZSF:Full state as a result of the NVM Subsystem Reset:
- d) ZSRO:Read Only state, if the most recent zone state was the ZSRO:Read Only state; and
- e) ZSO:Offline state, if the most recent zone state was the ZSO:Offline state.

Transitions between zone states cause reporting of a Zone Descriptor Changed asynchronous event as defined in Figure 53.

If the zoned namespace is formatted with a Format NVM command or created with a Namespace Management command, the zones in the zoned namespace are initialized to either the ZSE:Empty state or the ZSO:Offline state.

Zones that are in the ZSE:Empty state, the ZSIO:Implicitly Opened state, the ZSEO:Explicitly Opened state, the ZSC:Closed state, or the ZSF:Full state may transition to the ZSRO:Read Only state or the ZSO:Offline state by mechanisms outside the scope of this specification.

Figure 7 shows the valid transitions between each zone state from the time a zoned namespace is formatted or created. The transition (dotted line) from the ZSE:Empty state to the ZSC:Closed state is only valid when the zoned namespace is formatted with Zone Descriptor Extension support (refer to section 5.3). An arrow to or from a shaded area indicates transitions to or from all states in that area.

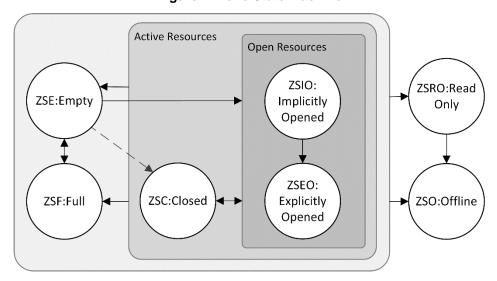


Figure 7: Zone State Machine

The processing of a command may cause multiple state machine transitions (e.g., the processing of a Write command may cause a transition from the ZSC:Closed state to the ZSIO:Implicitly Opened state and then cause a transition from the ZSIO:Implicitly Opened state to the ZSF:Full state).

2.1.1.3.1 ZSE:Empty state

Transition ZSE:ZSIO: The zone shall transition from the ZSE:Empty state to the ZSIO:Implicitly Opened state if there are available resources as defined in section 2.1.1.4 and a write operation writes one or more logical blocks of that zone.

Transition ZSE:ZSEO: The zone shall transition from the ZSE:Empty state to the ZSEO:Explicitly Opened state if there are available resources as defined in section 2.1.1.4 and a Zone Management Send command with a Zone Send Action of Open Zone completes successfully.

Transition ZSE:ZSC: The zone shall transition from the ZSE:Empty state to the ZSC:Closed state if there are available active resources as defined in section 2.1.1.4 and a Zone Management Send command with a Zone Send Action of Set Zone Descriptor Extension completes successfully.

Transition ZSE:ZSF: The zone shall transition from the ZSE:Empty state to the ZSF:Full state as a result of a Zone Management Send command with a Zone Send Action of Finish Zone completes successfully.

2.1.1.3.2 ZSIO:Implicitly Opened state

Transition ZSIO:ZSE: The zone shall transition from the ZSIO:Implicitly Opened state to the ZSE:Empty state as a result of successful completion of a Zone Management Send command with a Zone Send Action of Reset Zone.

Transition ZSIO:ZSEO: The zone shall transition from the ZSIO:Implicitly Opened state to the ZSEO:Explicitly Opened state as a result of successful completion of a Zone Management Send command with a Zone Send Action of Open Zone.

Transition ZSIO:ZSC: The zone shall transition from the ZSIO:Implicitly Opened state to the ZSC:Closed state as a result of:

- a) successful completion of a Zone Management Send command with a Zone Send Action of Close Zone; and
- b) the controller initiating the transition as defined in section 2.1.1.4.1.

Transition ZSIO:ZSF: The zone shall transition from the ZSIO:Implicitly Opened state to the ZSF:Full state:

- a) as a result of successful completion of a Zone Management Send command with a Zone Send Action of Finish Zone;
- b) as a result of a write operation that writes one or more logical blocks that causes the zone to reach its writeable zone capacity;
- c) due to a Zone Active Excursion (refer to section 5.6); and
- d) as a result of the zoned namespace becoming write protected (refer to the Namespace Write Protection section in the NVM Express Base Specification).

2.1.1.3.3 ZSEO:Explicitly Opened state

Transition ZSEO:ZSE: The zone shall transition from the ZSEO:Explicitly Opened state to the ZSE:Empty state as a result of successful completion of a Zone Management Send command with a Zone Send Action of Reset Zone.

Transition ZSEO:ZSC: The zone shall transition from the ZSEO:Explicitly Opened state to the ZSC:Closed state upon successful completion of a Zone Management Send command with a Zone Send Action of Close Zone.

Transition ZSEO:ZSF: The zone shall transition from the ZSEO:Explicitly Opened state to the ZSF:Full state:

- a) as a result of successful completion of a Zone Management Send command with a Zone Send Action of Finish Zone;
- b) as a result of a write operation that writes one or more logical blocks that causes the zone to reach its writeable zone capacity;
- c) due to a Zone Active Excursion (refer to section 5.6); or
- d) as a result of the zoned namespace becoming write protected (refer to the Namespace Write Protection section in the NVM Express Base Specification).

2.1.1.3.4 ZSC:Closed state

Transition ZSC:ZSE: The zone shall transition from the ZSC:Closed state to the ZSE:Empty state as a result of successful completion of a Zone Management Send command with a Zone Send Action of Reset Zone.

Transition ZSC:ZSIO: The zone shall transition from the ZSC:Closed state to the ZSIO:Implicitly Opened state, if there are available resources as defined in section 2.1.1.4 and:

- a) a write operation writes one or more logical blocks of that zone; or
- b) an explicit ZRWA Flush operation is completed.

Transition ZSC:ZSEO: The zone shall transition from the ZSC:Closed state to the ZSEO:Explicitly Opened state if there are available resources as defined in section 2.1.1.4 and a Zone Management Send command with a Zone Send Action of Open Zone completes successfully.

Transition ZSC:ZSF: The zone shall transition from the ZSC:Closed state to the ZSF:Full state:

- a) as a result of successful completion of a Zone Management Send command with a Zone Send Action of Finish Zone;
- b) due to a Zone Active Excursion (refer to section 5.6); and
- c) as a result of the zoned namespace becoming write protected (refer to the Namespace Write Protection section in the NVM Express Base Specification).

2.1.1.3.5 ZSF:Full state

Transition ZSF:ZSE: The zone shall transition from the ZSF:Full state to the ZSE:Empty state as a result of successful completion of a Zone Management Send command with a Zone Send Action of Reset Zone.

2.1.1.3.6 ZSRO:Read Only state

Transition ZSRO:ZSO: The zone shall transition from the ZSRO:Read Only state to the ZSO:Offline state as a result of successful completion of a Zone Management Send command with a Zone Send Action of Offline Zone.

2.1.1.3.7 ZSO:Offline state

There are no transitions from the ZSO:Offline state to any other zone state.

2.1.1.4 Zone Resources

Zones may have associated Active Resources, associated Open Resources, and associated ZRWA resources. The resources limit the number of zones that are allowed to be in each zone state. The resource relationship is defined in Figure 8.

Resource	States	Comment
Active	ZSIO:Implicitly Opened, ZSEO:Explicitly Opened,	Zones in zone states associated with this resource are limited by the Maximum Active Resources field.
Open	ZSC:Closed ZSIO:Implicitly Opened,	Zones in zone states associated with this resource
Ореп	ZSEO:Explicitly Opened ZSIO:Implicitly Opened,	are limited by the Maximum Open Resources field. Zones in zone states associated with this resource
ZRWA	ZSEO:Explicitly Opened, ZSC:Closed	are limited by the Number of ZRWA Resources field. Refer to section 5.7.

Figure 8: Zone Resources

Zones that have associated Open Resources are a subset of the zones that are associated with Active Resources. The Maximum Open Resources field shall be less than or equal to the Maximum Active Resources field in the I/O Command Set specific Identify Namespace Data Structure for the Zoned Namespace Command Set (refer to Figure 59).

If the ZRWA Supported bit is set to '1' in the OZCS field in the I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set, then the Number of ZRWA Resources field in that data structure shall be less than or equal to the Maximum Active Resources field in that data structure.

2.1.1.4.1 Managing resources

The controller associates Active Resources with zones in the ZSIO:Implicitly Opened state, the ZSEO:Explicitly Opened state, and the ZSC:Closed state. The controller associates Open Resources with zones in the ZSIO:Implicitly Opened state and the ZSEO:Explicitly Opened state.

Resource management for active and open resources is as follows:

- a) A transition from the ZSE:Empty state to the ZSIO:Implicitly Opened state or the ZSEO:Explicitly Opened state increases the resource usage of Active Resources and Open Resources by 1.
- A transition from the ZSE:Empty state to the ZSC:Closed state increases the resource usage of Active Resources by 1.

- c) A transition from the ZSIO:Implicitly Opened state or the ZSEO:Explicitly Opened state to the ZSC:Closed state decreases the resource usage of Open Resources by 1.
- d) A transition from the ZSC:Closed state to the ZSIO:Implicitly Opened state or the ZSEO:Explicitly Opened state increases the resource usage of Open Resources by 1.
- e) A transition from the ZSIO:Implicitly Opened state or the ZSEO:Explicitly Opened state to the ZSE:Empty state, the ZSF:Full state, the ZSRO:Read Only state, or the ZSO:Offline state decreases the resource usage of Active Resources and Open Resources by 1.
- f) A transition from the ZSC:Closed state to the ZSE:Empty state, the ZSRO:Read Only state, or the ZSO:Offline state decreases the resource usage of Active Resources by 1.
- g) A transition from the ZSE:Empty state to the ZSF:Full state shall not impact resource usage of Active Resources and Open Resources.

A controller processing a command that requests a zone to transition to the ZSIO:Implicitly Opened state, the ZSEO:Explicitly Opened state, or the ZSC:Closed state shall, if resources are not available and:

- a) the Maximum Active Resources field is greater than the Maximum Open Resources field and:
 - i. as a result of the requested transition the resource that is not available is Active Resources, then abort the command with a status code of Too Many Active Zones; or
 - ii. as a result of the requested transition the resource that is not available is Open Resources, and
 - a. one or more zones are in the ZSIO:Implicitly Opened state, then the controller shall select one of the zones in the ZSIO:Implicitly Opened state, transition that zone to the ZSC:Closed state, and proceed to process the command; or
 - b. no zones are in the ZSIO:Implicitly Opened state, then the controller shall abort the command with a status code of Too Many Open Zones;

or

b) the Maximum Active Resources field is equal to the Maximum Open Resources field and as a result of the requested transition the resource that is not available is Active Resources, then abort the command with a status code of Too Many Active Zones.

If the ZRWA Supported bit is set to '1' in the OZCS field in the I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set, then as described in Figure 8, the controller associates ZRWA Resources with zones in the ZSIO:Implicitly Opened, the ZSEO:Explicitly Opened, and the ZSC:Closed states.

Resource management for ZRWA Resources is as follows:

- a) A successful allocation of a ZRWA to a zone as a result of the Zone Management Send command (refer to section 3.4.3) increases the resource usage of ZRWA Resources by 1.
- b) For a zone with an associated ZRWA Resource, a transition to the ZSE:Empty state, the ZSF:Full state, the ZSRO:Read Only state, or the ZSO:Offline state decreases the resource usage of ZRWA Resources by 1.

A controller that supports ZRWA resources and that processes a command that requests a ZRWA Resource shall, if ZRWA Resources are not available due to the number of ZRWA Resources in use being equal to the Number of ZRWA Resources field, abort that command with a status code of ZRWA Resources Unavailable.

Zones that have associated Active Resources are transitioned to the ZSF:Full state when the zoned namespace becomes write protected. Refer to the Namespace Write Protection section in the NVM Express Base Specification.

The coordination of host software usage of resources associated with shared zoned namespaces is outside the scope of this specification.

2.1.1.5 Logical Block Allocation and Capacity Management

A logical block shall be marked as allocated when that logical block is written with:

- a) a Write command;
- b) a Write Uncorrectable command;

- c) a Write Zeroes command that does not deallocate the logical block (refer to the Deallocated or Unwritten Logical Blocks section in the NVM Command Set Specification);
- d) a Copy command; and
- e) a Zone Append command.

A logical block may be marked as allocated as the result of:

- a) a Write command not addressing that logical block (e.g., a write of LBA n causes allocation of LBAs n and n+1);
- b) a Write Uncorrectable command not addressing that logical block;
- c) a Write Zeroes command not addressing that logical block (refer to the Write Zeroes command in the NVM Command Set Specification);
- d) a Copy command not addressing that logical block;
- e) a Zone Management Send command that transitions a zone containing that logical block to the ZSEO:Explicitly Opened state or the ZSC:Closed state; and
- f) a Zone Append command.

A logical block may be marked deallocated as the result of:

- a) a Dataset Management command;
- b) a Write Zeroes command addressing that deallocates logical blocks (refer to the Deallocated or Unwritten Logical Blocks section in the NVM Command Set Specification);
- c) a sanitize operation; and
- d) a Format NVM command.

All logical blocks in a zone shall be marked as deallocated when the zone is in the ZSE:Empty state.

2.1.2 Command Ordering Requirements

Commands submitted to a zoned namespace are processed as specified in the NVM Express Base Specification and in the NVM Command Set Specification. As described in the NVM Command Set Specification, the controller is not responsible for checking the LBA of an Address-specific Write command to ensure any type of ordering between commands. For example, if an Address-specific Write command is submitted for LBA x and an Address-specific Write command is also submitted for LBA x + 1, there is no guarantee of the order of processing for those commands. If there are ordering requirements between these commands (e.g., zone type), host software is required to enforce that ordering during the submission of each of those commands.

2.1.3 Fused Operation

No fused operations are supported for this specification (e.g., the fused operations defined in the NVM Command Set Specification are not supported for this specification).

2.1.4 Atomic Operation

The AWUN, NAWUN, NABSN, AWUPF, NAWUPF, NABSPF atomicity parameters apply as defined in the Atomic Operations section in the NVM Command Set Specification.

2.1.5 End-to-end Protection Information

End-to-end protection information operates as defined in the NVM Command Set Specification, with requirements for the Zone Append command defined in section 3.4.1.1.

2.1.6 Metadata Region (MR)

The Metadata Region is as defined in the NVM Command Set Specification.

2.2 I/O Controller Requirements

2.2.1 Command Support

This specification implements the command support requirements for I/O controllers defined in the NVM Express Base Specification and in the NVM Command Set Specification. Additionally, Figure 9 defines Zoned Namespace Command Set specific commands that are mandatory, optional, and prohibited for an I/O controller that supports the Zoned Namespace Command Set Specification.

Figure 9: I/O Controller - Zoned Namespace Command Set Support

Command	Combined Opcode Value	Controller Support Requirements ¹	Reference	
Zone Management Send	79h	M	3.4.3	
Zone Management Receive	7Ah	M	3.4.2	
Zone Append 7Dh O 3.4.1				
Notes:				
O = Optional, M = Mandatory, P = Prohibited				

2.2.2 Log Page Support

This specification implements the log page support requirements for I/O controllers defined in the NVM Express Base Specification and in the NVM Command Set Specification. Additionally, Figure 10 defines Zoned Namespace Command Set specific log pages that are mandatory, optional, and prohibited for an I/O controller that supports the Zoned Namespace Command Set Specification.

Figure 10: I/O Controller - Zoned Namespace Command Set Specific Log Page Support

Log Page	Log Page Identifier	Log Page Support Requirements ¹	Reference	
Changed Zone List	BFh	0	4.1.4.1	
Notes: O = Optional, M = Mandatory, P = Prohibited				

2.2.3 Features Support

This specification implements the feature support requirements for I/O controllers defined in the NVM Express Base Specification and in the NVM Command Set Specification. Additional requirements are defined in section 4.1.3.

3 I/O Commands for the Zoned Namespace Command Set

This section defines the Zoned Namespace Command Set I/O commands.

3.1 Submission Queue Entry and Completion Queue Entry

The submission queue entry (SQE) structure and the completion queue entry (CQE) structure are as defined in the NVM Command Set Specification, with changes as defined in this section.

3.1.1 Common Command Format

The Common Command Format is as defined in the NVM Express Base Specification.

3.1.2 Command Specific Status Values

This specification supports the Command Specific status values defined in the NVM Express Base Specification and in the NVM Command Set Specification. Command Specific status values that are specific to the Zoned Namespace Command Set Specification are defined in this section.

Figure 11 defines the status values specific to the Zoned Namespace Command Set.

Figure 11: Status Code - Command Specific Status Values, Zoned Namespace Command Set

Value	Definition	Commands Affected
B6h	Invalid Zone Operation Request	Zone Append, Zone Management Send
B7h	ZRWA Resources Unavailable	Zone Management Send
B8h	Zone Boundary Error	Compare 1, Copy 1, Read 1, Verify 1, Write, Write Uncorrectable, Write Zeroes, Zone Append
B9h	Zone Is Full	Copy, Write, Write Uncorrectable, Write Zeroes, Zone Append
BAh	Zone Is Read Only	Copy, Write, Write Uncorrectable, Write Zeroes, Zone Append, Zone Management Send
BBh	Zone Is Offline	Compare, Copy, Read, Verify, Write, Write Uncorrectable, Write Zeroes, Zone Append, Zone Management Send
BCh	Zone Invalid Write	Copy, Write, Write Uncorrectable, Write Zeroes
BDh	Too Many Active Zones	Copy, Write, Write Uncorrectable, Write Zeroes, Zone Append, Zone Management Send
BEh	Too Many Open Zones	Copy, Write, Write Uncorrectable, Write Zeroes, Zone Append, Zone Management Send
BFh	Invalid Zone State Transition	Zone Management Send
Motoc:	·	

Notes:

3.2 Zoned Namespace Command Set Commands

This specification includes the commands listed in Figure 12. Section 3.3 describes the Zoned Namespace Command Set specific behavior for NVM Command Set I/O commands. Section 3.4 describes the commands defined by this specification. Commands are submitted as defined in the NVM Express Base Specification.

Figure 12: Opcodes for Zoned Namespace Command Set I/O Commands

Opcode by Field					
(07:02)	(01:00)	Combined	2		
	Data	Opcode ¹	Command ²	Reference	
Function	Transfer ³	opoduo			
NV	NVM Express Base Specification I/O commands implemented by this specification				
Refer to the NVM Express Base Specification			Flush ⁴	NVM Express Base Specification	
Refer to the NVM Express Base Specification Reservation Register NVM Express Base Specification			NVM Express Base Specification		
Refer to the NVM Express Base Specification Reservation Report			NVM Express Base Specification		

^{1.} This command is affected if the Read Across Zone Boundaries bit is cleared to '0' in the Zoned Namespace Command Set specific Identify Namespace data structure (refer to section 4.1.5.1).

Figure 12: Opcodes for Zoned Namespace Command Set I/O Commands

Refer to the NVM Refer to the NVM Refer to the NVM	Express Base Express Base	Specification	Command ² Reservation Acquire Reservation Release	Reference NVM Express Base Specification NVM Express Base Specification
Refer to the NVM Refer to the NVM Refer to the NVM	Transfer ³ Express Base Express Base Express Base	Specification Specification	Reservation Acquire Reservation Release	NVM Express Base Specification
Refer to the NVM Refer to the NVM Refer to the NVM	Express Base Express Base Express Base	Specification Specification	Reservation Release	
Refer to the NVM Refer to the NVM	Express Base Express Base	Specification	Reservation Release	
Refer to the NVM	Express Base			NVM Express Base Specification
	•	Specification	4	
Pofor to the NIV/M	NVM Comm		Cancel ⁴	NVM Express Base Specification
Defer to the NIV/M/		and Set comma	ands implemented by this	specification
Refer to the NVIVI C	Command Set		Dataset Management	NVM Command Set Specification
	NVM Com	mand Set com	mands modified by this s	pecification
Refer to the NVM (Command Set	Specification	Write	3.3.7
Refer to the NVM (Refer to the NVM Command Set Specification			3.3.3
Refer to the NVM Command Set Specification			Write Uncorrectable	3.3.9
Refer to the NVM Command Set Specification			Compare	3.3.1
Refer to the NVM Command Set Specification			Write Zeroes	3.3.10
Refer to the NVM (Refer to the NVM Command Set Specification			3.3.6
Refer to the NVM	Refer to the NVM Command Set Specification			3.3.2
	I/O commands defined in this specification			
0111 10b	01b	79h	Zone Management Send	3.4.3
0111 10b	10b	7Ah	Zone Management Receive	3.4.2
0111 11b	01b	7Dh	Zone Append	3.4.1

Notes:

- Opcodes not listed are defined in the NVM Express Base Specification and in the NVM Command Set Specification.
- 2. All Zoned Namespace Command Set Commands use the Namespace Identifier (NSID) field. The value FFFFFFFh is not supported in this field unless footnote 4 in this figure indicates that a specific command does support that value.
- 3. Indicates the data transfer direction of the command. All options to the command shall transfer data as specified or transfer no data. All commands, including vendor specific commands, shall follow this convention: 00b = no data transfer; 01b = host to controller; 10b = controller to host; 11b = bidirectional.
- 4. This command may support the use of the Namespace Identifier (NSID) field set to FFFFFFFh.

3.3 NVM Command Set I/O Commands

The Zoned Namespace Command Set section implements the NVM Command Set I/O commands, with changes as defined in this section.

3.3.1 Compare command

The Compare command operates as defined in the NVM Command Set Specification, with the additional requirements associated with the zone type of the specified zones that the command operates on (refer to section 2.1.1.2).

3.3.1.1 Command Completion

Command completion is as defined in the NVM Command Set Specification, with the additional Zoned Namespace Command Set Command Specific status values that are defined in Figure 13.

Figure 13: Compare - Command Specific Status Values

Value	Definition
B8h	Zone Boundary Error: The command specifies logical blocks in more than one zone.
BBh	Zone Is Offline: The accessed zone is in the ZSO:Offline state.

3.3.2 Copy command

The Copy command operates as defined in the NVM Command Set Specification, with the additional requirements associated with the zone type of the specified zones that the command operates on (refer to section 2.1.1.2).

3.3.2.1 Command Completion

Command completion is as defined in the NVM Command Set Specification, with the additional Zoned Namespace Command Set Command Specific status values that are defined in Figure 14.

Figure 14: Copy - Command Specific Status Values

Value	Definition
B8h	Zone Boundary Error: The command specifies a Source Range Entry that contains logical blocks in
	more than one zone or a destination LBA range that contains logical blocks in more than one zone.
B9h	Zone Is Full: The zone specified by the destination LBA range is in the ZSF:Full state.
BAh	Zone Is Read Only: The zone specified by the destination LBA range is in the ZSRO:Read Only state.
BBh	Zone Is Offline: A zone specified by a Source Range Entry or the zone specified by the destination
	LBA range is in the ZSO:Offline state.
BCh	Zone Invalid Write: The write to the zone was not at the write pointer.
BDh	Too Many Active Zones: The controller does not allow additional active zones.
BEh	Too Many Open Zones: The controller does not allow additional open zones.

3.3.3 Dataset Management command

The Dataset Management command operates as defined in the NVM Command Set Specification, with the additional requirements defined in this section.

If the specified zone is in the ZSO:Offline state then the command shall be aborted with a status code of Zone is Offline.

3.3.3.1 Command Completion

Command completion is as defined in the NVM Command Set Specification, with the additional Zoned Namespace Command Set Command Specific status values that are defined in Figure 15.

Figure 15: Dataset Management - Command Specific Status Values

Value	Definition
BBh	Zone Is Offline: A zone specified by a Source Range Entry or the zone specified by the destination
	LBA range is in the ZSO:Offline state.

3.3.4 Flush command

The Flush command operates as defined in the NVM Command Set Specification, with the additional requirements defined in this section.

lf:

- a) a volatile write cache is present;
- b) a volatile write cache is enabled; and
- c) the specified zone is in the ZSO:Offline state,

then the command shall be aborted with a status code of Zone Is Offline.

3.3.4.1 Command Completion

Command completion is as defined in the NVM Command Set Specification, with the additional Zoned Namespace Command Set Command Specific status values that are defined in Figure 16.

Figure 16: Flush - Command Specific Status Values

Value	Definition
BBh	Zone Is Offline: A zone specified by a Source Range Entry or the zone specified by the destination
	LBA range is in the ZSO:Offline state.

3.3.5 Read command

The Read command operates as defined in the NVM Command Set Specification, with the additional requirements associated with the zone type of the specified zones that the command operates on (refer to section 2.1.1.2).

3.3.5.1 Command Completion

Command completion is as defined in the NVM Command Set Specification, with the additional Zoned Namespace Command Set Command Specific status values that are defined in Figure 17.

Figure 17: Read - Command Specific Status Values

Value	Definition
B8h	Zone Boundary Error: The command specifies logical blocks in more than one zone.
BBh	Zone Is Offline: The accessed zone is in the ZSO:Offline state.

3.3.6 Verify command

The Verify command operates as defined in the NVM Command Set Specification, with the additional requirements associated with the zone type of the specified zones that the command operates on (refer to section 2.1.1.2).

3.3.6.1 Command Completion

Command completion is as defined in the NVM Command Set Specification, with the additional Zoned Namespace Command Set Command Specific status values that are defined in Figure 18.

Figure 18: Verify - Command Specific Status Values

Value	Definition
B8h	Zone Boundary Error: The command specifies logical blocks in more than one zone.
BBh	Zone Is Offline: The accessed zone is in the ZSO:Offline state.

3.3.7 Zone Append command

The Zone Append command writes data and metadata, if applicable, to the I/O controller for the zone indicated by the ZSLBA field. The controller assigns the data and metadata, if applicable, to a set of logical blocks within the zone. The lowest LBA of the set of logical blocks written is returned in the completion queue entry (refer to section 3.4.1.2). The host may also specify protection information to include as part of the operation.

This command uses Command Dword 2, Command Dword 3, Command Dword 10, Command Dword 11, Command Dword 12, Command Dword 13, Command Dword 14, and Command Dword 15 fields. If the command uses PRPs for the data transfer, then the Metadata Pointer, PRP Entry 1, and PRP Entry 2 fields are used. If the command uses SGLs for the data transfer, then the Metadata SGL Segment Pointer and SGL Entry 1 fields are used. All other command specific fields are reserved.

Write ordering in the case of multiple outstanding Zone Append commands to a zone is undefined and left to the controller.

If the zone specified by the Zone Append command is not a Sequential Write Required zone, then the command shall be aborted with a status code of Invalid Field in Command.

If the ZSLBA field in the Zone Append command does not specify the lowest logical block for a zone, then the command shall be aborted with a status code of Invalid Field in Command.

If a Zone Append command is received for a zone while that zone is associated with a ZRWA, then the controller shall abort the command with a status code of Invalid Zone Operation Request.

The AWUN, NAWUN, NABSN, AWUPF, NAWUPF, NABSPF atomicity parameters apply as defined in the Atomic Operations section in the NVM Command Set Specification to the Zone Append command.

Figure 19: Zone Append – Metadata Pointer

Bits	Description
63:00	Metadata Pointer (MPTR): This field contains the Metadata Pointer, if applicable. Refer to the Common Command Format figure in the NVM Express Base Specification for the definition of this
00.00	field.

Figure 20: Zone Append – Data Pointer

Bits	Description
	Data Pointer (DPTR): This field specifies the location of a data buffer where data is transferred from.
127:00	Refer to the Common Command Format figure in the NVM Express Base Specification for the
	definition of this field.

Figure 21: Zone Append – Command Dword 2 and Dword 3

Bits	Description
63:48	Reserved
47:00	Logical Block Tags Upper (LBTU): This field and Command Dword 14 specify the variable sized Logical Block Storage Tag (LBST) and Initial Logical Block Reference Tag (ILBRT) fields, which are defined in the NVM Express Base Specification. If the namespace is not formatted to use end-to-end protection information, then this field is ignored by the controller.

Figure 22: Zone Append – Command Dword 10 and Command Dword 11

Bits	Description
	Zone Start Logical Block Address (ZSLBA): This field indicates the 64-bit address of the lowest
63:00	logical block of the zone in which the data and metadata, if applicable, associated with this command
	is to be stored. Command Dword 10 contains bits 31:00; Command Dword 11 contains bits 63:32.

Figure 23: Zone Append – Command Dword 12

Bits	Description
31	Limited Retry (LR): If this bit is set to '1', then the controller should apply limited retry efforts. If this bit is cleared to '0', then the controller should apply all available error recovery means to write the data to the NVM, as defined in the NVM Command Set Specification.
30	Force Unit Access (FUA): If this bit is set to '1', then for data and metadata, if any, associated with logical blocks specified by the Zone Append command, the controller shall write that data and metadata, if any, to non-volatile medium before indicating command completion. There is no implied ordering with other commands. If this bit is cleared to '0', then this bit has no
	effect, as defined in the NVM Command Set Specification.
29:26	Protection Information (PRINFO): This field specifies the Protection Information field, as defined in the NVM Command Set Specification.
25	Protection Information Remap (PIREMAP): This bit determines the contents of the reference tag written to the media (refer to section 3.4.1.1).
	If this bit is cleared to '0' and the specified zoned namespace is formatted for Type 1 protection, the controller shall abort the command with a status of Invalid Protection Information.
	If this bit is set to '1' and the specified zoned namespace is formatted for Type 3 protection, the controller shall abort the command with a status of Invalid Protection Information.
24	Storage Tag Check (STC): This bit specifies that the Storage Tag field shall be checked as part of end-to-end data protection processing as defined in the NVM Command Set Specification.
23:20	Directive Type (DTYPE) : Specifies the Directive Type associated with the Directive Specific field (refer to the NVM Express Base Specification).
19:16	Command Extension Type (CETYPE): Specifies the Command Extension Type that applies to the command (refer to the Key Per I/O section in the NVM Express Base Specification).
15:00	Number of Logical Blocks (NLB): This field indicates the number of logical blocks to be written. This is a 0's based value.

The definition of Command Dword 13 is based on the CETYPE value. If the CETYPE value is cleared to 0h, then Command Dword 13 is defined in Figure 37. If the CETYPE value is non-zero, then Command Dword 13 is defined in Figure 38.

Figure 24: Zone Append – Command Dword 13 if CETYPE is cleared to 0h

Bits	Description	
31:16	Directive Specific (DSPEC): Specifies the Directive Specific value associated with the Directive	
	Type field (refer to the NVM Express Base Specification).	
15:00	Reserved	

Figure 25: Zone Append - Command Dword 13 if CETYPE is non-zero

Bits	Description
31:16	Directive Specific (DSPEC): Specifies the Directive Specific value associated with the Directive
31.16	Type field (refer to the Key Per I/O section in the NVM Express Base Specification).
15:00	Command Extension Value (CEV): The definition of this field is dependent on the value of the
	CETYPE field. Refer to the Key Per I/O section in the NVM Express Base Specification.

Figure 26: Zone Append - Command Dword 14

Bits	Description
31:00	Logical Block Tags Lower (LBTL): This field and bits 47:00 of Command Dword 2 and Dword 3 specify the variable sized Logical Block Storage Tag (LBST) and Initial Logical Block Reference Tag (ILBRT) fields, which are defined in the NVM Command Set Specification. If the namespace is not formatted to use end-to-end protection information, then this field is ignored.

Figure 27: Zone Append - Command Dword 15

Bits	Description
31:16	Logical Block Application Tag Mask (LBATM): This field specifies the Application Tag Mask value.
	This field is ignored if the zoned namespace is not formatted to use end-to-end protection information.
	Refer to the End-to-end Data Protection section in the NVM Command Set Specification.
15:00	Logical Block Application Tag (LBAT): This field specifies the Application Tag value. This field is
	ignored if the zoned namespace is not formatted to use end-to-end protection information. Refer to
	the End-to-end Data Protection section in the NVM Command Set Specification.

3.3.7.1 Protection Information

For the Zone Append command, the actual LBA where data is written by the command is not known to the host until the Zone Append command completes (refer to the ALBA field defined in section 3.4.1.2). The host is not able to provide the actual LBA of the data in the reference tags in the Protection Information at the time the Zone Append command is issued (refer to the End-to-end Data Protection section of the NVM Command Set Specification). As a result, handling of LBA based reference tags in the Protection Information is handled as defined in this section.

Unless otherwise specified, for the protection information received by the controller from the host, the checks performed by the controller shall be performed as defined in the Control of Protection Information Checking – PRCHK section of the NVM Command Set Specification.

For the Reference Tag written to the media, if the PIREMAP bit is:

- a) cleared to '0', then the controller shall write the Reference Tag to the media per the End-to-end Protection Information section of the NVM Command Set Specification without modification; or
- b) set to '1', then the controller shall write the Logical Block Reference Tag to media for the first and subsequent LBAs as follows:
 - A) Media Reference Tag[0] = ILBRT + (ALBA ZSLBA); and
 - B) Media Reference Tag[n+1] = Media Reference Tag[n] + 1

Where: Media Reference Tag [0] is the Logical Block Reference Tag written to media for the first LBA, and Media Reference Tag [n+1] is the Logical Block Reference Tag written to media for all other LBAs.

If the specified zoned namespace is formatted for Type 1 protection and the PIREMAP bit is set to '1', then the host should initialize the ILBRT field to the least-significant bits of the Zone Start Logical Block

Address (ZSLBA) field sized to the number of bits in the Logical Block Reference Tag (refer to the Storage Tag and Logical Block Reference Tag from Storage and Reference Space section in the NVM Command Set Specification). If the value in the ILBRT field does not match the value in the ZSLBA field sized to the number of bits in the Logical Block Reference Tag, then the controller shall abort the command with a status code of Invalid Protection Information.

Note: When writing protection information using the Zone Append command with the PIREMAP bit set to '1', the Logical Block Reference Tag written to media is not the value transferred from the host to the controller, but contains the value calculated as defined in this section.

The controller shall write all protection information received from the host, other than the Logical Block Reference Tag, to the media without modification.

3.3.7.2 Command Completion

When the command is completed, the controller shall post a completion queue entry (CQE) to the associated I/O Completion Queue indicating the status for the command. If the command is successfully completed, then the lowest LBA containing the data written by the command is returned in the Assigned LBA (ALBA) field of the completion queue entry. Dword 0 contains bits 31:00 of the ALBA field; Dword 1 contains bits 63:32 of the ALBA field. If the command is not successfully completed, then the contents of the ALBA field are undefined.

Figure 41 defines the Zone Append command specific status values.

Value Definition Invalid Protection Information: The Protection Information (PRINFO) field settings specified in 81h the command are invalid for the Protection Information with which the namespace was formatted or the ILBRT field is invalid (refer to section 3.4.1). Invalid Zone Operation Request: The operation requested is invalid due to having received a B6h Zone Append command for a zone associated with a ZRWA B8h Zone Boundary Error: The command specifies logical blocks in more than one zone. B9h Zone Is Full: The accessed zone is in the ZSF:Full state Zone Is Read Only: The accessed zone is in the ZSRO:Read Only state. BAh Zone Is Offline: The accessed zone is in the ZSO:Offline state. **BBh** BDh Too Many Active Zones: The controller does not allow additional active zones. BEh Too Many Open Zones: The controller does not allow additional open zones.

Figure 28: Zone Append - Command Specific Status Values

3.3.8 Write command

The Write command operates as defined in the NVM Command Set Specification, with the additional requirements associated with the zone type of the specified zones that the command operates on (refer to section 2.1.1.2).

3.3.8.1 Command Completion

Command completion is as defined in the NVM Command Set Specification, with the additional Zoned Namespace Command Set Command Specific status values that are defined in Figure 29.

Value	Definition
B8h	Zone Boundary Error: The command specifies logical blocks in more than one zone.
B9h	Zone Is Full: The accessed zone is in the ZSF:Full state.
BAh	Zone Is Read Only: The accessed zone is in the ZSRO:Read Only state.
BBh	Zone Is Offline: The accessed zone is in the ZSO:Offline state.
BCh	Zone Invalid Write: The write to a zone was not at the write pointer.
BDh	Too Many Active Zones: The controller does not allow additional active zones.
BFh	Too Many Open Zones: The controller does not allow additional open zones.

Figure 29: Write - Command Specific Status Values

3.3.9 Write Uncorrectable command

The Write Uncorrectable command operates as defined in the NVM Command Set Specification, with the additional requirements associated with the zone type of the specified zones that the command operates on (refer to section 2.1.1.2).

3.3.9.1 Command Completion

Command completion is as defined in the NVM Command Set Specification, with the additional Zoned Namespace Command Set Command Specific status values that are defined in Figure 30.

Figure 30: Write Uncorrectable – Command Specific Status Values

Value	Definition
B8h	Zone Boundary Error: The command specifies logical blocks in more than one zone.
B9h	Zone Is Full: The accessed zone is in the ZSF:Full state.
BAh	Zone Is Read Only: The accessed zone is in the ZSRO:Read Only state.
BBh	Zone Is Offline: The accessed zone is in the ZSO:Offline state.
BCh	Zone Invalid Write: The write to a zone was not at the write pointer.
BDh	Too Many Active Zones: The controller does not allow additional active zones.
BEh	Too Many Open Zones: The controller does not allow additional open zones.

3.3.10 Write Zeroes command

The Write Zeroes command operates as defined in the NVM Command Set Specification, with the additional requirements associated with the zone type of the specified zones that the command operates on (refer to section 2.1.1.2).

3.3.10.1 Command Completion

Command completion is as defined in the NVM Command Set Specification, with the additional Zoned Namespace Command Set Command Specific status values that are defined in Figure 31.

Figure 31: Write Zeroes – Command Specific Status Values

Value	Definition
B8h	Zone Boundary Error: The command specifies logical blocks in more than one zone.
B9h	Zone Is Full: The accessed zone is in the ZSF:Full state.
BAh	Zone Is Read Only: The accessed zone is in the ZSRO:Read Only state.
BBh	Zone Is Offline: The accessed zone is in the ZSO:Offline state.
BCh	Zone Invalid Write: The write to a zone was not at the write pointer.
BDh	Too Many Active Zones: The controller does not allow additional active zones.
BEh	Too Many Open Zones: The controller does not allow additional open zones.

3.4 Zoned Namespace Command Set I/O Commands

3.4.1 Zone Append command

The Zone Append command writes data and metadata, if applicable, to the I/O controller for the zone indicated by the ZSLBA field. The controller assigns the data and metadata, if applicable, to a set of logical blocks within the zone. The lowest LBA of the set of logical blocks written is returned in the completion queue entry (refer to section 3.4.1.2). The host may also specify protection information to include as part of the operation.

This command uses Command Dword 2, Command Dword 3, Command Dword 10, Command Dword 11, Command Dword 12, Command Dword 13, Command Dword 14, and Command Dword 15 fields. If the command uses PRPs for the data transfer, then the Metadata Pointer, PRP Entry 1, and PRP Entry 2 fields are used. If the command uses SGLs for the data transfer, then the Metadata SGL Segment Pointer and SGL Entry 1 fields are used. All other command specific fields are reserved.

Write ordering in the case of multiple outstanding Zone Append commands to a zone is undefined and left to the controller.

If the zone specified by the Zone Append command is not a Sequential Write Required zone, then the command shall be aborted with a status code of Invalid Field in Command.

If the ZSLBA field in the Zone Append command does not specify the lowest logical block for a zone, then the command shall be aborted with a status code of Invalid Field in Command.

If a Zone Append command is received for a zone while that zone is associated with a ZRWA, then the controller shall abort the command with a status code of Invalid Zone Operation Request.

The AWUN, NAWUN, NABSN, AWUPF, NAWUPF, NABSPF atomicity parameters apply as defined in the Atomic Operations section in the NVM Command Set Specification to the Zone Append command.

Figure 32: Zone Append - Metadata Pointer

Bits	Description
63:00	Metadata Pointer (MPTR): This field contains the Metadata Pointer, if applicable. Refer to the Common Command Format figure in the NVM Express Base Specification for the definition of this field.

Figure 33: Zone Append - Data Pointer

Bits	Description
	Data Pointer (DPTR): This field specifies the location of a data buffer where data is transferred from.
127:00	Refer to the Common Command Format figure in the NVM Express Base Specification for the
	definition of this field.

Figure 34: Zone Append – Command Dword 2 and Dword 3

Bits	Description
63:48	Reserved
47:00	Logical Block Tags Upper (LBTU): This field and Command Dword 14 specify the variable sized Logical Block Storage Tag (LBST) and Initial Logical Block Reference Tag (ILBRT) fields, which are defined in the NVM Express Base Specification. If the namespace is not formatted to use end-to-end protection information, then this field is ignored by the controller.

Figure 35: Zone Append - Command Dword 10 and Command Dword 11

Bits	Description
	Zone Start Logical Block Address (ZSLBA): This field indicates the 64-bit address of the lowest
63:00	logical block of the zone in which the data and metadata, if applicable, associated with this command
	is to be stored. Command Dword 10 contains bits 31:00; Command Dword 11 contains bits 63:32.

Figure 36: Zone Append - Command Dword 12

Bits	Description				
31	Limited Retry (LR): If this bit is set to '1', then the controller should apply limited retry efforts. If this bit is cleared to '0', then the controller should a pply all available error recovery means to write the data to the NVM, as defined in the NVM Command Set Specification.				
30	Force Unit Access (FUA): If this bit is set to '1', then for data and metadata, if any, associated with logical blocks specified by the Zone Append command, the controller shall write that data and metadata, if any, to non-volatile medium before indicating command completion.				
	There is no implied ordering with other commands. If this bit is cleared to '0', then this bit has no effect, as defined in the NVM Command Set Specification.				
29:26	Protection Information (PRINFO): This field specifies the Protection Information field, as defined in the NVM Command Set Specification.				
	Protection Information Remap (PIREMAP): This bit determines the contents of the reference tag written to the media (refer to section 3.4.1.1).				
25	If this bit is cleared to '0' and the specified zoned namespace is formatted for Type 1 protection, the controller shall abort the command with a status of Invalid Protection Information.				
	If this bit is set to '1' and the specified zoned namespace is formatted for Type 3 protection, the controller shall abort the command with a status of Invalid Protection Information.				
24	Storage Tag Check (STC): This bit specifies that the Storage Tag field shall be checked as part of end-to-end data protection processing as defined in the NVM Command Set Specification.				

Figure 36: Zone Append - Command Dword 12

Bits	Description			
23:20	Directive Type (DTYPE): Specifies the Directive Type associated with the Directive Specific field			
	(refer to the NVM Express Base Specification).			
10:16	Command Extension Type (CETYPE): Specifies the Command Extension Type that applies to the			
19:16	command (refer to the Key Per I/O section in the NVM Express Base Specification).			
15:00	Number of Logical Blocks (NLB): This field indicates the number of logical blocks to be written.			
	This is a 0's based value.			

The definition of Command Dword 13 is based on the CETYPE value. If the CETYPE value is cleared to 0h, then Command Dword 13 is defined in Figure 37. If the CETYPE value is non-zero, then Command Dword 13 is defined in Figure 38.

Figure 37: Zone Append – Command Dword 13 if CETYPE is cleared to 0h

Bits	Description		
31:16	Directive Specific (DSPEC): Specifies the Directive Specific value associated with the Directive		
31.10	Type field (refer to the NVM Express Base Specification).		
15:00	Reserved		

Figure 38: Zone Append - Command Dword 13 if CETYPE is non-zero

Bits	Description
31:16	Directive Specific (DSPEC): Specifies the Directive Specific value associated with the Directive
	Type field (refer to the Key Per I/O section in the NVM Express Base Specification).
15:00	Command Extension Value (CEV): The definition of this field is dependent on the value of the
	CETYPE field. Refer to the Key Per I/O section in the NVM Express Base Specification.

Figure 39: Zone Append - Command Dword 14

Bits	Description
31:00	Logical Block Tags Lower (LBTL): This field and bits 47:00 of Command Dword 2 and Dword 3
	specify the variable sized Logical Block Storage Tag (LBST) and Initial Logical Block Reference Tag
31.00	(ILBRT) fields, which are defined in the NVM Command Set Specification. If the namespace is not
	formatted to use end-to-end protection information, then this field is ignored.

Figure 40: Zone Append - Command Dword 15

Bits	Description
	Logical Block Application Tag Mask (LBATM): This field specifies the Application Tag Mask value.
31:16	This field is ignored if the zoned namespace is not formatted to use end-to-end protection information.
	Refer to the End-to-end Data Protection section in the NVM Command Set Specification.
15:00	Logical Block Application Tag (LBAT): This field specifies the Application Tag value. This field is
	ignored if the zoned namespace is not formatted to use end-to-end protection information. Refer to
	the End-to-end Data Protection section in the NVM Command Set Specification.

3.4.1.1 Protection Information

For the Zone Append command, the actual LBA where data is written by the command is not known to the host until the Zone Append command completes (refer to the ALBA field defined in section 3.4.1.2). The host is not able to provide the actual LBA of the data in the reference tags in the Protection Information at the time the Zone Append command is issued (refer to the End-to-end Data Protection section of the NVM Command Set Specification). As a result, handling of LBA based reference tags in the Protection Information is handled as defined in this section.

Unless otherwise specified, for the protection information received by the controller from the host, the checks performed by the controller shall be performed as defined in the Control of Protection Information Checking – PRCHK section of the NVM Command Set Specification.

For the Reference Tag written to the media, if the PIREMAP bit is:

- c) cleared to '0', then the controller shall write the Reference Tag to the media per the End-to-end Protection Information section of the NVM Command Set Specification without modification; or
- d) set to '1', then the controller shall write the Logical Block Reference Tag to media for the first and subsequent LBAs as follows:
 - C) Media Reference Tag[0] = ILBRT + (ALBA ZSLBA); and
 - D) Media Reference Tag[n+1] = Media Reference Tag[n] + 1

Where: Media Reference Tag [0] is the Logical Block Reference Tag written to media for the first LBA, and Media Reference Tag [n+1] is the Logical Block Reference Tag written to media for all other LBAs.

If the specified zoned namespace is formatted for Type 1 protection and the PIREMAP bit is set to '1', then the host should initialize the ILBRT field to the least-significant bits of the Zone Start Logical Block Address (ZSLBA) field sized to the number of bits in the Logical Block Reference Tag (refer to the Storage Tag and Logical Block Reference Tag from Storage and Reference Space section in the NVM Command Set Specification). If the value in the ILBRT field does not match the value in the ZSLBA field sized to the number of bits in the Logical Block Reference Tag, then the controller shall abort the command with a status code of Invalid Protection Information.

Note: When writing protection information using the Zone Append command with the PIREMAP bit set to '1', the Logical Block Reference Tag written to media is not the value transferred from the host to the controller, but contains the value calculated as defined in this section.

The controller shall write all protection information received from the host, other than the Logical Block Reference Tag, to the media without modification.

3.4.1.2 Command Completion

When the command is completed, the controller shall post a completion queue entry (CQE) to the associated I/O Completion Queue indicating the status for the command. If the command is successfully completed, then the lowest LBA containing the data written by the command is returned in the Assigned LBA (ALBA) field of the completion queue entry. Dword 0 contains bits 31:00 of the ALBA field; Dword 1 contains bits 63:32 of the ALBA field. If the command is not successfully completed, then the contents of the ALBA field are undefined.

Figure 41 defines the Zone Append command specific status values.

Value Definition Invalid Protection Information: The Protection Information (PRINFO) field settings specified in 81h the command are invalid for the Protection Information with which the namespace was formatted or the ILBRT field is invalid (refer to section 3.4.1). Invalid Zone Operation Request: The operation requested is invalid due to having received a B6h Zone Append command for a zone associated with a ZRWA B8h Zone Boundary Error: The command specifies logical blocks in more than one zone. Zone Is Full: The accessed zone is in the ZSF:Full state. B9h Zone Is Read Only: The accessed zone is in the ZSRO:Read Only state. BAh BBh Zone Is Offline: The accessed zone is in the ZSO:Offline state. Too Many Active Zones: The controller does not allow additional active zones. BDh Too Many Open Zones: The controller does not allow additional open zones. **BEh**

Figure 41: Zone Append - Command Specific Status Values

3.4.2 Zone Management Receive command

The Zone Management Receive command returns a data buffer that contains information about zones. That information includes characteristics of the zone, the state of the zone, the capacity of the zone, and other information defined in section 3.4.2.2. The host uses this command to determine the current settings for this information.

If this information changes (e.g., as indicated by the Capacity Changed bit set to '1' in the completion queue entry of a Zone Management Send command, or by a Zone Descriptor Changed event), then the host may use this command to determine the current state of this information (e.g., the current capacity of the zone or the Reset Zone Recommended attribute).

The Zone Management Receive command uses the Data Pointer, Command Dword 10, Command Dword 11, Command Dword 12, and Command Dword 13 fields. All other command specific fields are reserved.

Figure 42: Zone Management Receive - Data Pointer

Bits	Description
127:00	Data Pointer (DPTR): This field specifies the location of a data buffer where data is transferred from.
	Refer to the NVM Express Base Specification for the definition of this field.

Figure 43: Zone Management Receive - Command Dword 10 and Command Dword 11

Bits	Description
	Starting LBA (SLBA): This field specifies an LBA in the lowest numbered zone that the Zone
63:00	Receive Action operates on. Command Dword 10 contains bits 31:00; Command Dword 11 contains
	bits 63:32.

Figure 44: Zone Management Receive - Command Dword 12

Bits	Description
31:00	Number of Dwords (NDW): This field specifies the number of dwords to return. If host software specifies a size larger than what the Zone Receive Action data structure returns, then the controller returns the complete result with undefined results for dwords beyond the end of the data of the Zone Receive Action data structure. This is a 0's based value.

Figure 45: Zone Management Receive - Command Dword 13

Bits	Description				
31:17	Reserved				
	Zone Receive Action Specific Features (ZRASPF):				
16	Zone Receive Action D		Defini	Definition	
	Report Zones of Z		of Zon	I Report: If this bit is cleared to '0', then the value in the Number les fields (refer to Figure 46 and Figure 47) indicates the number le Descriptors that match the criteria in the Zone Receive Action ic field.	
	Zones		indicat	If this bit is set to '1', then the value in the Number of Zones fields indicates the number of fully transferred Zone Descriptors in the data buffer.	
	All other valu	es	Reser	ved	
	Zone Receive Action Specific (ZRAS):			RAS):	
	Zone Receive Action	Description			
		Reporting Options: Value Definition			
	Report Zones	Oh		List all zones.	
		1h		List the zones in the ZSE:Empty state.	
		2h		List the zones in the ZSIO:Implicitly Opened state.	
		3h		List the zones in the ZSEO:Explicitly Opened state.	
45.00		4h		List the zones in the ZSC:Closed state.	
15:08		5h		List the zones in the ZSF:Full state.	
			6h	List the zones in the ZSRO:Read Only state.	
			7h	List the zones in the ZSO:Offline state.	
			8h	Reserved	
	Extended Report Zones			List all zones that have the zone attribute in the Zone Attributes field of the Zone Descriptor data structure (refer to Figure 48):	
		'	9h	Reset Zone Recommended bit set to '1';	
				• Finish Zone Recommended bit set to '1'; or	
			06	Zone Finished by Controller bit set to '1'.	
			∣0h ∣1h	Reserved	
			111		

Figure 45: Zone Management Receive - Command Dword 13

Bits	Description					
		3Fh				
		All other Reserved				
		values				
	All other values	Reserved				
	Zone Receive Action (ZRA):					
	Value	Definition				
07:00	00h	Report Zones: Reports Zone Descriptor entries through the Report Zones data structure (refer to Figure 46).				
	01h	Extended Report Zones: Reports Zone Descriptor entries through the Extended Report Zones data structure (refer to Figure 47). This value is supported if the zoned namespace is formatted with a non-zero Zone Descriptor Extension Size. Otherwise, the controller shall abort the command with a status code of Invalid Field in Command.				
	02h to FFh	Reserved				

3.4.2.1 Zone Receive Actions

The Zone Management Receive command Zone Receive Action field specifies what action to perform.

3.4.2.1.1 Report Zones

The Report Zones action returns the Report Zones data structure (refer to Figure 46). The Zone Descriptors of the Report Zones data structure shall:

- a) report only Zone Descriptors of zones for which the ZSLBA value is greater than or equal to the ZSLBA value of the zone specified by the SLBA value in the command;
- b) match the criteria in the Zone Receive Action Specific field; and
- c) be sorted in ascending order by the ZSLBA value of each zone.

3.4.2.1.2 Extended Report Zones

The Extended Report Zones action returns the Extended Report Zones data structure (refer to Figure 47). The Zone Descriptors and Zone Descriptor Extensions of the Extended Report Zones data structure shall:

- a) report only Zone Descriptors and Zone Descriptor Extensions of zones for which the ZSLBA value of is greater than or equal to the ZSLBA value of the zone specified by the SLBA value in the command;
- b) match the criteria in the Zone Receive Action Specific field; and
- c) be sorted in ascending order by the ZSLBA value of each zone.

3.4.2.2 Zone Management Receive Data Structures

3.4.2.2.1 Report Zones Data Structure

Figure 46 defines the Report Zones Data Structure.

Figure 46: Report Zones Data Structure

Bytes	Description				
	Number of Zones (NZ): If the Partial Report bit (refer to Figure 45) is cleared to '0', then this field indicates the number of zones that match the criteria defined in section 3.4.2.1.1.				
07:00	If the Partial Report bit is set to '1', then this field indicates the number of zones for which complete Zone Descriptors were transferred to the data buffer.				
	Refer to section 3.4.2.1.1 for the content of the data buffer.				
63:08	Reserved				
	Zone Descriptor List				
127:64	Zone Descriptor 0: Contains the Zone Descriptor for the first zone reported, if any (refer to Figure 48).				
191:128	Zone Descriptor 1: Contains the Zone Descriptor for the second zone reported, if any.				
•••					
((NZ+1)*64)+63:	Zone Descriptor NZ 1. Contains the Zone Descriptor for the last zone reported if any				
(NZ+1)*64	Zone Descriptor NZ-1: Contains the Zone Descriptor for the last zone reported, if any.				

3.4.2.2.2 Extended Report Zones Data Structure

Figure 47 defines the Extended Report Zones Data Structure.

Figure 47: Extended Report Zones Data Structure

Bytes ¹	Description			
	Number of Zones (NZ): If the Partial Report bit (refer to Figure 45) is cleared to '0', then this field indicates the number of zones that match the criteria defined in section 3.4.2.1.2.			
07:00	If the Partial Report bit is set to '1', then this field indicates the number of zones for which complete Zone Descriptors and complete Zone Descriptor Extensions were transferred to the data buffer.			
	Refer to section 3.4.2.1.2 for the content of the data buffer.			
63:08	Reserved			
Zone De	escriptor and Zone Descriptor Extension List			
127:64	Zone Descriptor 0: Contains the Zone Descriptor for the first zone reported, if any (refer to Figure 48).			
(ZDES+127):128	Zone Descriptor Extension 0: Contains the Zone Descriptor Extension for the first zone reported, if any. If no Zone Descriptor Extension is associated with the zone, then the contents of this field are undefined.			
(ZDES+191):(ZDES+128)	Zone Descriptor 1: Contains the Zone Descriptor for the second zone reported, if any.			
((2*ZDES)+191):(ZDES+192)	Zone Descriptor Extension 1: Contains the Zone Descriptor Extension for the second zone reported, if any.			
((NZ * ZDES)+((NZ + 1)*64) -1): (((NZ-1) * ZDES)+(NZ*64))	Zone Descriptor NZ-1: Contains the Zone Descriptor for the last zone reported, if any.			
(((NZ)*ZDES)+((NZ+1)*64)-1): (((NZ-1)*ZDES)+((NZ+1)*64))	Zone Descriptor Extension NZ-1: Contains the Zone Descriptor Extension for the last zone reported, if any.			
Notes:				
1. ZDES corresponds to the formatted Zone Descriptor Extension Size field in bytes (i.e. value multiplied by				

^{3.4.2.2.3} Zone Descriptor Data Structure

64) (refer to Figure 60).

Figure 48 defines the Zone Descriptor data structure.

Figure 48: Zone Descriptor Data Structure

Bytes	Descrip	ription							
	Zone Type Attributes (ZTATTR): This field indicates attributes for the type of the zone:								
	Bits Description								
	7:4	1	Reserved						
00			Zone Type (ZT): This field indicates the type of the zone.						
	3:0			V	alue	Definition			
					2h	Sequential Write Re	quired		
				All other values		Reserved			
	Zone S	tate A	ttributes (ZSATTR): This	field indica	tes attributes for the s	state of the zone:		
	Bit	S	Description						
			Zone State (ZS): 7	his fiel	d indicates	the state of the zone			
					Value	Definition	1		
					0h	Reserved	1		
					1h	Empty	1		
01					2h	Implicitly Opened]		
	7:4	1			3h	Explicitly Opened			
					4h	Closed			
					5h to Ch	Reserved]		
					Dh	Read Only	_		
					Eh	Full	_		
					Fh	Offline			
	3:0		Reserved						
	Zone A	ttribu	tes (ZA): Indicates	attribut	es for the z	one:			
	Bits		ription						
	Zone Descriptor Extension Valid (ZDEV): If this bit is set to '1', then Zone Descript								
	7		nsion data is associated with the zone. If this bit is cleared to '0', then no Zone						
	C. 4	Descriptor Extension data is associated with the zone. Refer to section 5.1.							
	6:4	Reserved Zone Random Write Area Valid (ZRWAV): If this bit is set to '1', then there is a ZRWA							
02			er to section 5.7) associated with the zone. If this bit is cleared to '0', then there is no						
			/A associated with the zone.						
			et Zone Recommended (RZR): If this bit is set to '1', then the controller recommends						
	that this zone be reset. Refer to section 5.4.								
	1	Finish Zone Recommended (FZR): If this bit is set to '1', then the controller recommends							
	that this zone be finished. Refer to section 5.5.								
	O Zone Finished by Controller (ZFC): If this bit is set to '1', then the controller finished this zone due to a Zone Active Excursion. Refer to section 5.6.								
		zone	que to a Zone Activ	e Excu	rsion. Kefe	to section 5.6.			

Figure 48: Zone Descriptor Data Structure

Bytes		escription						
		ttributes Information (ZAI): Indicates additional information associated with attributes for the						
	Zone:							
	Bits	Description						
	7:4	Reserved						
		Reset Zone Recommended Time Limit (RZRTL): If the Reset Zone Recommended bit is set to '1', then the value in this field selects a field in the I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set that indicates amount of time before the NVM subsystem may perform a vendor specific action on a zone after the Reset Zone Recommended bit is set to '1' in the Zone Attributes field for that zone.						
	3:2	Value Field						
		00b Reset Recommended Limit (RRL) 01b Reset Recommended Limit 1 (RRL1)						
03		10b Reset Recommended Limit 1 (RRL1)						
		11b Reset Recommended Limit 2 (RRL2)						
		Finish Zone Recommended Time Limit (FZRTL): If the Finish Zone Recommended bit is						
		set to '1', then the value in this field selects a field in the I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set that indicates the amount of time before the NVM subsystem may perform a vendor specific action on a zone after the Finish Zone Recommended bit is set to '1' in the Zone Attributes field for that zone:						
	1:0	Value Field						
		00b Finish Recommended Limit (FRL)						
		01b Finish Recommended Limit 1 (FRL1)						
		10b Finish Recommended Limit 2 (FRL2)						
		11b Finish Recommended Limit 3 (FRL3)						
07:04	Reserv	red						
01101		Capacity (ZCAP): This field contains the maximum number of logical blocks that are available						
	to be w	or the Zone Size field (refer to Figure 60).						
15:08	If the Variable Zone Capacity bit is cleared to '0' in the Zone Operation Characteristics fi Zoned Namespace Command Set specific Identify Namespace data structure (refer t 4.1.5.1), then this field does not change without a change to the format of the zoned names If the Variable Zone Capacity bit is set to '1' in the Zone Operation Characteristics field in t Namespace Command Set specific Identify Namespace data structure, then the zone cap change upon successful completion of a Zone Management Send command specifying Send Action of Reset Zone (refer to section 3.4.3.1.4.1).							
23:16	logical	one Start Logical Block Address (ZSLBA): This field contains the 64-bit address of the lowest gical block for the zone.						
31:24	Write F	Write Pointer (WP): This field is the logical block address where the next write operation for this zone should be issued. Refer to section 2.1.1.2.1 for the behavior of the write pointer.						
63:32	Reserv	<u> </u>						
	•							

3.4.2.3 Command Completion

When the command is completed, the controller shall post a completion queue entry (CQE) to the associated I/O Completion Queue indicating the status for the command.

3.4.3 Zone Management Send command

The Zone Management Send command requests an action on one or more zones. The command uses the Data Pointer, Command Dword 10, Command Dword 11, and Command Dword 13 fields. All other command specific fields are reserved.

Figure 49: Zone Management Send – Command Dword 10 and Command Dword 11

Bits	Description						
	Starting LBA (SLBA): The definition of this field depends on the Zone Send Action, as shown in the following table:						
	Zone Send Action	Definition					
63:00	Flush Explicit ZRWA Range This field specifies the LBA of the highest-numbered logical blorequested to be flushed. Command Dword 10 contains bits 31 SLBA; Command Dword 11 contains bits 63:32 of the SLBA section 3.4.3.1.3).						
	All others	This field specifies the LBA of the lowest-numbered logical block of the zone on which the Zone Send Action is performed. Command Dword 10 contains bits 31:00 of the SLBA; Command Dword 11 contains bits 63:32 of the SLBA.					

Figure 50: Zone Management Send – Command Dword 13

Bits	Description						
31:24	Reserved						
	Zone Managem	ent (ZM): This field indicates attributes for the Zone Send Action being issued.					
	Zone Send Ad	tion Definition Bits Description					
	Open Zone				111		
			:06	Reserved	(51) -		.,,
			Data Lifetime (DL): The value in this field specifies an estimate				
			of the relative Data Lifetime of this zone as compared to the relative Data Lifetime of other zones in this namespace. Refer to				
23:16			section 3.4.3.1.3.				
		05	:00		Value	December 11 and	
	Set Zone		.00		Value	No estimate is prov	iidad
	Descriptor Extension				0h 1h	Shortest Data Lifet	imo
	LAGUSIOU				2h to 3Eh	Intermediate Data	
					3Fh	Longest Data Lifeti	
	All other valu	IOS PO	serv	rod	31 11	Longest Data Lifeti	iiie
15:10	Reserved	103 110	SCIV	eu			
13.10	Zone Send Acti	on Specif	ic Oı	ntion (7SA	SO):		
				-			
	Zone Send Action			Definition			
09	Open Zone			ZRWA Allocation (ZRWAA): This bit controls the allocation of a Zone Random Write Area to a zone. Allocation of a ZRWA resource			
	Set Zone Descriptor Extension			operates as described in section 3.4.3.1.4.1.			
	All othe		Reserved				
					. then the SL	BA field is ignored. I	f this bit is cleared to '0',
08							ection 3.4.3.1 for specific
	behavior for eac						·
	Zone Send Acti	on (ZSA):	Defi	nes the zor	ne action to b	e performed for Zone	e Management Send.
	Value	Definition	1				Refer to section
	00h	Reserved					
	01h	Close Zone: Close one or more zones.					3.4.3.1.1
	02h				or more zone		3.4.3.1.2
	03h	Open Zone: Open one or more zones.				3.4.3.1.4	
07:00	04h				r more zones		3.4.3.1.5
	05h		ne:	Offline one	or more zon	es.	3.4.3.1.6
	06h to 0Fh	Reserved					
	10h	Set Zone Extension	data	3.4.3.1.7			
	11h	Flush Explicit ZRWA Range: Flushes a range of logical blocks from a ZRWA to a zone.					3.4.3.1.3
	12h to FFh Reserved						
		•					

If the command completes successfully, depending on the Zone Send Action field and the current states of the zones specified by the command, then that command may affect zones in various ways, including the following:

- a) the zone state may change;
- b) the Zone Descriptor Extension data may change; and
- c) the Zone Descriptor Extension Valid bit in the Zone Attributes field may change.

If the controller has multiple outstanding Zone Management Send commands that specify one or more of the same zones, then the results are undefined.

If the zoned namespace containing the specified zone is write protected as described in the Namespace Write Protection section in the NVM Express Base Specification, then the controller shall abort the command with a status code of Namespace is Write Protected.

If there are insufficient available Active Resources, insufficient available Open Resources, or insufficient available ZRWA resources, then the command shall be aborted as defined in section 2.1.1.4, and no zone state transition shall occur.

If the command SLBA field does not specify the starting logical block for a zone in the specified zoned namespace, the Zone Send Action does not specify Flush Explicit ZRWA Range, and the Select All bit is cleared to '0', then the controller shall abort the command with a status code of Invalid Field in Command.

If the Zone Send Action field specifies the Set Zone Descriptor Extension Zone Send Action and the Zone Descriptor Extension Size field value in the Zoned Namespace Command Set specific Identify Namespace data structure is cleared to 0h, then the controller shall abort the command with a status code of Invalid Field in Command.

If the ZRWA Supported bit is cleared to '0' in the OZCS field, then the command shall be aborted with a status code of Invalid Zone Operation Request if the Zone Send Action field specifies:

- a) Open Zone with the ZRWAA bit set to '1':
- b) Set Zone Descriptor Extension with the ZRWAA bit set to '1'; or
- c) Flush Explicit ZRWA Range.

If the Zone Send Action field specifies Flush Explicit ZRWA Range and the EXPFLUSHSUP bit is cleared to '0' in the I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set, then the controller shall abort the command with a status code of Invalid Zone Operation Request.

For a shared zoned namespace, the method used by hosts to coordinate Zone Management Send commands is outside the scope of this specification.

3.4.3.1 Zone Send Actions

The Zone Management Send command Zone Send Action field defines what action to perform on one or more zones.

3.4.3.1.1 Close Zone

If the Select All bit in Command Dword 13 is cleared to '0', and the zone specified by the SLBA field is in the:

- a) ZSIO:Implicitly Opened state or the ZSEO:Explicitly Opened state, then the zone shall be transitioned to the ZSC:Closed state;
- b) ZSC:Closed state, then no change shall be made to the zone state; and
- c) ZSE:Empty state, the ZSF:Full state, the ZSRO:Read Only state, or the ZSO:Offline state, then the controller shall abort the command with a status code of Invalid Zone State Transition.

If the Select All bit is set to '1', then the SLBA field shall be ignored and all zones that are in the:

- a) ZSIO:Implicity Opened state; and
- b) ZSEO:Explicitly Opened state,

shall be transitioned to the ZSC:Closed state.

3.4.3.1.2 Finish Zone

If the Select All bit in Command Dword 13 is cleared to '0', and the zone specified by the SLBA field is in the:

- a) ZSE:Empty state, the ZSIO:Implicitly Opened state, the ZSEO:Explicitly Opened state, or the ZSC:Closed state, then the zone shall be transitioned to the ZSF:Full state;
- b) ZSF:Full state, then no change shall be made to the zone state; and
- c) ZSRO:Read Only state or the ZSO:Offline state, then the controller shall abort the command with a status code of Invalid Zone State Transition.

If the Select All bit is set to '1', then the SLBA field shall be ignored by the controller and all zones that are in the:

- a) ZSIO:Implicity Opened state;
- b) ZSEO:Explicitly Opened state; and
- c) ZSC:Closed state,

shall be transitioned to the ZSF:Full state.

3.4.3.1.3 Flush Explicit ZRWA Range

The Zone Send Action of Flush Explicit ZRWA Range is a request to move data and metadata to the zone specified by the SLBA field. The logical blocks in the specified LBA range are written from the ZRWA associated with that zone to the zone.

The range of logical blocks to be flushed starts at the write pointer and ends at the LBA specified by the SLBA field in Command Dword 10 and Command Dword 11. On successful completion of a command for which the SLBA is not the highest-numbered LBA of the zone, the write pointer for that zone shall be set to one greater than the value in the SLBA field.

The number of logical blocks in the specified LBA range shall be a multiple of ZRWAFG. If the number of logical blocks to be flushed is not an integral multiple of ZRWAFG, then the controller shall abort the command with a status of Invalid Field in Command.

If the range of logical block addresses to be flushed by the Flush Explicit ZRWA Range Send Action contains a logical block address that is not contained in the ZRWA, then the command shall be aborted with a status code of Invalid Zone Operation Request.

Logical blocks which were not written to the ZRWA prior to being flushed by the Flush Explicit ZRWA Range Send Action shall be treated as unwritten logical blocks when read (refer to the Deallocated or Unwritten Logical Blocks section in the NVM Command Set Specification).

If a Flush Explicit ZRWA Range Send Zone Action is requested and the specified zone is not:

- a) in the ZSEO:Explicitly Opened state, the ZSIO:Implicitly Opened state, or the ZSC:Closed state;
 and
- b) associated with a ZWRA,

then the controller shall abort the command with a status code of Invalid Zone Operation Request.

If the Select All bit is set to '1', the controller shall abort the command with a status code of Invalid Field in Command.

3.4.3.1.4 Open Zone

If the Select All bit is cleared to '0' in Command Dword 13 and the zone specified by the SLBA field is in the:

- a) ZSE:Empty state, the ZSIO:Implicitly Opened state or the ZSC:Closed state, then the zone should be transitioned to the ZSEO:Explicitly Opened state;
- b) ZSEO:Explicitly Opened state, then no change shall be made to the zone state; and
- c) ZSF:Full state, the ZSRO:Read Only state, or the ZSO:Offline state, then the controller shall abort the command with a status code of Invalid Zone State Transition.

If the Select All bit is set to '1', then the SLBA field shall be ignored and all zones that are in the ZSC:Closed state should be transitioned to the ZSEO:Explicitly Opened state.

If there are insufficient available Active Resources or insufficient available Open Resources, then the command shall be aborted as described in section 2.1.1.4 and no zone state transition shall occur.

The Data Lifetime of a zone is relative to the Data Lifetimes of other zones in the same namespace.

The Data Lifetime of a zone is not defined until a Zone Management Send command is processed that transitions that zone from the ZSE:Empty state to the ZSEO:Explicitly Opened state or the ZSC:Closed state.

The Data Lifetime of a zone (refer to Figure 50) represents the expected time from a Zone Management Send command transitioning that zone from the ZSE:Empty state to the ZSEO:Explicitly Opened state or the ZSC:Closed state (refer to section 2.1.1.4) until that zone transitions to:

- a) the ZSE:Empty state; or
- b) the ZSO:Offline state.

3.4.3.1.4.1 Open Zone ZRWA Allocation

The Zone Random Write Area Allocation (ZRWAA) bit in the Zone Send Action Specific Features field controls the allocation of a ZRWA to a zone in a Zone Management Send command when the Zone Send Action is set to Open Zone or set to Set Zone Descriptor Extension.

If the ZRWAA bit is cleared to '0' or a ZRWA is associated with this zone, then the processing of the command shall have no effect on ZRWA resources.

If the ZRWAA bit is set to '1' and there is no ZRWA associated with the zone, then:

- if no ZRWA resources are available, then the controller shall abort the command with a status code of ZRWA Resources Unavailable and no zone state transition shall occur; and
- if the zone is not in the ZSE:Empty state, then the controller shall abort the command with a status code of Invalid Zone Operation Request and no zone state transition shall occur.

A ZRWA shall be allocated to the specified zone upon successful completion of the Zone Management Send command if:

- the ZRWAA bit is set to '1';
- a ZRWA resource is available (refer to Number of ZRWA Resources field and section 2.1.1.4.1);
- no ZRWA is currently associated with the specified zone;
- the Zone Send Action is set to Open Zone or set to Set Zone Descriptor Extension; and
- the zone is in the ZSE:Empty state.

3.4.3.1.5 Reset Zone

If the Select All bit in Command Dword 13 is cleared to '0', and the zone specified by the SLBA field is in the:

- a) ZSIO:Implicitly Opened state, the ZSEO:Explicitly Opened state, the ZSC:Closed state, or the ZSF:Full state, then the specified zone shall be transitioned to the ZSE:Empty state;
- b) ZSE:Empty state, then no change shall be made to the zone state; and
- c) ZSRO:Read Only state, or the ZSO:Offline state, then the controller shall abort the command with a status code of Invalid Zone State Transition.

If the Select All bit is set to '1', then the SLBA field shall be ignored and all zones that are in the:

- a) ZSIO:Implicity Opened state:
- b) ZSEO:Explicitly Opened state:
- c) ZSC:Closed state; and
- d) the ZSF:Full state,

shall be transitioned to the ZSE:Empty state.

If the command completes successfully, then for each affected zone:

- a) the Write Pointer field in the Zone Attributes field in the Zone Descriptor shall be set to the ZSLBA of the zone; and
- b) the following bits in the Zone Attributes field in the Zone Descriptor shall be cleared to '0':
 - a) Zone Descriptor Extension Valid;
 - b) Finish Zone Recommended;

- c) Reset Zone Recommended;
- d) Zone Finished by Controller; and
- e) Zone Random Write Area Valid.

If the Variable Zone Capacity bit is set to '1' in the Zone Operation Characteristics field in the Zoned Namespace Command Set specific Identify Namespace data structure (refer to Figure 59), then the controller may change the Zone Capacity field in the Zone Descriptor of each affected zone. If the Zone Capacity field is changed for one or more zones, then the Zone Capacity Changed bit shall be set to '1' in the completion gueue entry Dword 0 (refer to section 3.4.3.2).

3.4.3.1.6 Offline Zone

If the Select All bit in Command Dword 13 is cleared to '0', and the zone specified by the SLBA field is in the:

- a) ZSRO:Read Only state, then the specified zone shall be transitioned to the ZSO:Offline state;
- b) ZSO:Offline state, then no change shall be made to the zone state; and
- c) ZSE:Empty state, the ZSIO:Implicitly Opened state, the ZSEO:Explicitly Opened state, the ZSC:Closed state, or the ZSF:Full state, then the controller shall abort the command with a status code of Invalid Zone State Transition.

If the Select All bit is set to '1', then the SLBA field shall be ignored, and all zones that are in the ZSRO:Read Only state shall be transitioned to the ZSO:Offline state.

3.4.3.1.7 Set Zone Descriptor Extension

If the Select All bit in Command Dword 13 is cleared to '0' and the zone specified by the SLBA field is in:

- a) the ZSE:Empty state, then the zone shall be transitioned to the ZSC:Closed state; and
- b) any state other than the ZSE:Empty state, then the controller shall abort the command with a status code of Invalid Zone State Transition.

If the Select All bit is set to '1', then the command shall be aborted with a status code of Invalid Field in Command.

If there are insufficient available Active Resources, the command shall be aborted as described in section 2.1.1.4 and no zone state transition shall occur.

On successful command completion, the Zone Descriptor Extension of the zone shall be set to the data in the data buffer.

3.4.3.2 Command Completion

When the command is completed, the controller shall post a completion queue entry (CQE) to the associated I/O Completion Queue indicating the status for the command. Figure 51 defines the Zone Management Send command specific status values.

Figure 51: Zone Management Send - Command Specific Status Values

Value	Definition
B6h	Invalid Zone Operation Request: The operation requested is invalid. This may be due to various conditions, including:
2011	attempting to allocate a ZRWA when a zone is not in the ZSE:Empty state; or
	 invalid Flush Explicit ZRWA Range Send Zone Action operation.
B7h	ZRWA Resources Unavailable: No ZRWAs are available.
BAh	Zone Is Read Only: Zone is in the ZSRO:Read Only state. This may have occurred during the
DAII	processing of the command.
BBh	Zone Is Offline: Zone is in the ZSO:Offline state. This may have occurred during the processing
ВЫТ	of the command.
BDh	Too Many Active Zones: The controller does not allow additional active zones.
BEh	Too Many Open Zones: The controller does not allow additional open zones.
BFh	Invalid Zone State Transition: The request is not a valid zone state transition.

Dword 0 of the completion queue entry indicates if the zone capacity of the specified zone has been changed. The definition of Dword 0 of the completion queue entry is in Figure 52.

Figure 52: Zone Management Send - Completion Queue Entry Dword 0

Bits	Description
31:01	Reserved
00	Zone Capacity Changed (ZCC): This bit indicates if the zone capacity has changed for one or more of the zones specified by the command. If this bit is set to '1', then a zone capacity has changed due to this command. If this bit is cleared to '0', then a zone capacity has not changed due to this command.

If a zone capacity change occurred, then the host may use the Zone Management Receive command as defined in section 3.4.1 to determine what has changed.

4 Admin Commands for the Zoned Namespace Command Set

4.1 Admin Command behavior for the Zoned Namespace Command Set

The Admin commands are as defined in the NVM Express Base Specification. The Zoned Namespace Command Set specific behavior for Admin commands is defined in this section.

4.1.1 Asynchronous Event Request Command

The Asynchronous Event Request command operates as defined in the NVM Express Base Specification. In addition to the Asynchronous Events defined in the NVM Express Base Specification and in the NVM Command Set Specification, the Zoned Namespace Command Set defines the Asynchronous Events in this section.

Figure 53 defines the Zoned Namespace Command Set specific Asynchronous Event Information – Notice data structure.

Figure 53: Asynchronous Event Information - Notice, Zoned Namespace Command Set

Value	Definition
	Zone Descriptor Changed: The Zone Descriptor data structure for a zone in a specific zoned namespace (refer to Figure 54) has changed. The Zone Descriptor of the zone that changed is indicated in the Changed Zone List log page. To clear this event, host software reads the Zone Changed List log page using the Get Log Page command with the Retain Asynchronous Event bit cleared to '0'.
	For a specific zone, a Zone Descriptor data structure change that occurred, for any of the following reasons shall not generate a Zone Descriptor Changed event and shall not cause modifications to the Changed Zones List log page:
EFh	 a) a Zone Management Send command that specified that zone; b) a Zone Management Send command that specified all zones; c) a write operation that transitioned that zone:
	 i. from the ZSE:Empty state to the ZSIO:Implicitly Opened state; ii. from the ZSIO:Implicitly Opened state to the ZSF:Full state; iii. from the ZSEO:Explicitly Opened state to the ZSF:Full state; or iv. from the ZSC:Closed state to the ZSIO:Implicitly Opened state;
	 d) the controller transitioning that zone to the ZSF:Full state due to an NVM Subsystem Reset; and
	e) the controller transitioning that zone to the ZSC:Closed state (refer to section 2.1.1.4.1).

4.1.1.1 Command Completion

A completion queue entry (CQE) is posted to the Admin Completion Queue if there is an asynchronous event to report to the host. A controller implements the same logic defined for the Asynchronous Event Request command in the NVM Express Base Specification, with the following addition:

Figure 54: Asynchronous Event Request - Completion Queue Entry Dword 1

Bytes	Description
3:0	Namespace Identifier (NSID): If the Asynchronous Event Request command returned a Zoned Namespace Command Set Notice event (refer to Figure 53), then this field indicates the namespace identifier that the asynchronous event occurred on. If the Asynchronous Event Request command returned an event other than a Zoned Namespace Command Set Notice event, then this field is reserved. If the Asynchronous Event Request command did not complete successfully, then this field is reserved.

4.1.2 Format NVM command

The Format NVM command operates as defined in the NVM Express Base Specification and in the NVM Command Set Specification. The Format Index indicates:

- a) a valid User Data Format from the LBA Format field in the NVM Command Set Identify Namespace data structure:
- b) a valid Extended LBA Format in the I/O Command Set specific Identify Namespace data structure for the NVM Command Set; and
- c) a valid LBA Format Extension in the I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set.

4.1.3 Get Features and Set Features Commands

Features support requirements for I/O controllers supporting the Zoned Namespace Command Set are as defined in the NVM Command Set Specification and in this section.

Figure 55 defines the Zoned Namespace Command Set specific Set Features Command Asynchronous Event Configuration – Command Dword 11 data structure (refer to the NVM Express Base Specification).

Figure 55: Asynchronous Event Configuration - Command Dword 11

Bits	Description
27	Zone Descriptor Changed Notices (ZDCN): This bit specifies whether an asynchronous event notification is sent to the host for a Zone Descriptor Changed event. If this bit is set to '1', then the Zone Descriptor Changed event is sent as defined in Figure 53 when this condition occurs. If this bit is cleared to '0', then the controller shall not send the Zone Descriptor Changed event to the host.

4.1.4 Get Log Page Command

The Get Log Page command operates as defined in the NVM Express Base Specification and in the NVM Command Set Specification. If a Get Log Page command is processed that specifies a Log Page Identifier that is not supported, then the controller should abort the command with status Invalid Field in Command.

In addition to the log pages defined in the NVM Express Base Specification and in the NVM Command Set Specification, the Zoned Namespace Command Set defines the log pages in this section.

Log page scope is as defined in the NVM Express Base Specification, except as modified by this specification.

The rules for namespace identifier usage are defined in the NVM Express Base Specification.

Figure 56: Log Page Identifiers

Log Page Identifier	csi ²	Scope	Log Page Name	Reference
BFh	Υ	Namespace ¹	Changed Zone List	4.1.4.1

Key:

Namespace = The log page contains information about a specific zoned namespace.

Notes:

- 1. For namespace identifiers other than 0h or FFFFFFFh.
- 2. If multiple İ/O Command Sets are supported (refer to the NVM Express Base Specification), then the CSI field is used by the log page: Y = Yes, N = No. If Yes, refer to the definition of the log page for details on usage.

4.1.4.1 Changed Zone List (Log Page Identifier BFh)

This log page indicates if a Zone Descriptor Changed event has occurred for one or more zones. If there is an enabled Zone Descriptor Changed Event pending for a specific zone, then the Changed Zone List includes an entry for that zone.

The Changed Zone List log page is 4,096 bytes in size. This log page contains a Zone Identifier List with up to 511 Zone Identifier entries. The Changed Zone List log page is defined in Figure 57.

A Zone Identifier entry contains the ZSLBA of the zone associated with the changed Zone Descriptor. Each ZSLBA shall appear not more than once in the Zone Identifier List. Unused entries shall be zero-filled.

Figure 57: Changed Zone List Log Page

Durton	Description				
Bytes	Description				
	Header				
04.00	Number of Zone Identifiers (NZID): This field indicates the number of Zone Identifiers entries				
01:00	in the list.				
07:02	Reserved				
	Zone Identifier List				
15:08	Zone Identifier 0: This field contains the ZSLBA of the first zone in the list, if present.				
23:16	Zone Identifier 1: This field contains the ZSLBA of the second zone in the list, if present.				
((NZID-1)*8+15):	Zana Identifier NZID 4. This field contains the ZCLDA of the last zone in the list if present				
((NZID-1)*8+8)	Zone Identifier NZID-1: This field contains the ZSLBA of the last zone in the list, if present.				

The controller shall set the Number of Zone Identifiers field in the log page to the number of valid entries contained in the Zone Identifier List data structure.

To determine changes, the host reads the Changed Zone List log page, and for each ZSLBA specified in a Zone Identifier entry, issues a Zone Management Receive command with the Zone Receive Action set to Report Zones or Extended Report Zones, and specifying the ZSLBA from that Zone Identifier entry.

The host should read the entire page with the RAE bit cleared to '0'. This log page is dynamic and when reading with offset without the header then the data may be changed from a previous read of the page.

For a given zoned namespace, if the controller is unable to populate the Changed Zone List log page with any valid entries and there is at least one Zone Descriptor Changed event since the last time the log page was read, then the controller shall set the Number of Zone Identifiers in that log page to FFFFh, and the remainder of the list shall be zero filled. The host may read the entire Report Zones data structure or the entire Extended Report Zones data structure to discover which Zone Descriptors have changed since the last time the information was read.

The log page content should not be retained after an NVM Subsystem Reset.

4.1.5 Identify Command

This specification implements the Identify Command and associated Identify data structures defined in the NVM Express Base Specification and in the NVM Command Set Specification. Additionally, the Zoned Namespace Command Set defines the Identify data structures defined in this section.

Each I/O Command Set is assigned a specific Command Set Identifier (CSI) value by the NVM Express Base Specification. The Zoned Namespace Command Set is assigned a CSI value of 02h.

Figure 58: CNS Values

CNS Value	O/M ¹	Definition	NSID 2	CNTID 3	csı ⁴	Reference Section
		Active Namespa	ce Manag	jement		
00h	М	Identify Namespace data structure for the specified NSID or the namespace capabilities for the NVM Command Set. 5	Y	N	N ⁶	NVM Command Set Specification
01h	М	Identify Controller Data Structure, I/O Command Set Independent. ⁵	Z	N	N	NVM Express Base Specification

Figure 58: CNS Values

CNS Value	о/м 1	Definition	NSID 2	CNTID 3	csi 4	Reference Section
		I/O Command Set specific Identify Namespace data structure for the			00h	NVM Command Set Specification
05h	M	specified NSID for the I/O Command Set specified in the CSI field. ⁵	Y	N	02h	4.1.5.1
0.01		I/O Command Set specific Identify Controller data structure for the		N	00h	NVM Command Set Specification
06h	М	controller processing the command. 5	N	N	02h	4.1.5.2
09h	0	Identify Namespace data structure for the specified Format Index containing the namespace capabilities for the NVM Command Set. 5	N	N	00h	NVM Command Set Specification
		I/O Command Set specific Identify Namespace data structure for the			00h	NVM Command Set Specification
0Ah	0	specified Format Index for the I/O Command Set specified in the CSI field. ⁵	N	N	02h	0
11h	0	Identify Namespace data structure for the specified allocated NSID.	Y	N	N	NVM Command Set Specification
16h	0	A Namespace Granularity List is returned to the host for up to sixteen Namespace Granularity Entries.	N	N	N	NVM Command Set Specification

Notes:

- 1. O/M definition: O = Optional, M = Mandatory.
- 2. The NSID field is used: Y = Yes. N = No.
- 3. The CDW10.CNTID field is used: Y = Yes, N = No.
- 4. The CDW11.CSI field value or N if the field is not used. Since this specification is an extension of the NVM Command Set (refer to section 1.1) a host is required to use the CSI value of 00h and the CSI value of 02h to obtain all of the refer to section 1.4.2.3, section 1.4.2.4, and section 4.1.5.4.
- 5. Selection of a UUID may be supported. Refer to the UUIDs for Vendor Specific Information section of the NVM Command Set Specification.
- 6. This Identify data structure applies to namespaces that are associated with command sets that specify logical blocks (i.e., Command Set Identifier 0h or Command Set Identifier 02h).

4.1.5.1 I/O Command Set Specific Identify Namespace Data Structure for the Zoned Namespace Command Set (CNS 05h, CSI 02h)

Figure 59 defines the I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set.

Figure 59 specifies fields in the I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set that define capabilities used by a host to format or create a namespace. If the NSID field is set to FFFFFFFh, then the controller shall return an I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set that:

- for fields in Figure 59 that indicate "Yes" in the Reported column, contain a value that is the same for all namespaces using any of the LBA formats associated with the Number of LBA Formats field (refer to the LBA Format List Structure section in the NVM Command Set Specification); and
- for fields in Figure 59 that indicate "No" in the Reported column, conatin a value cleared to 0h.

If the controller supports the Namespace Management capability (refer to the Namespace Management section in the NVM Express Base Specification) and the NSID field is set to FFFFFFFh, then the controller shall return an I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set. If the controller does not support the Namespace Management capability

and the NSID field is set to FFFFFFFh, then the controller may abort the command with a status code of Invalid Namespace or Format.

Figure 59: I/O Command Set Specific Identify Namespace Data Structure for the Zoned Namespace Command Set

Bytes	о/м1	Description	Reported ²
		Zone Operation Characteristics (ZOC): This field indicates the zone operation characteristics of the zoned namespace.	
		Bits Description	
01:00	0	15:2 Reserved Zone Active Excursions (ZAE): If this bit is set to '1', then a controller may transition a zone in the ZSIO:Implicitly Opened state, the ZSEO:Explicitly Opened state, or the ZSC:Closed state to the ZSF:Full state due to a vendor specific excursion event. If this bit is cleared to '0', then a controller shall not transition a zone due to a vendor specific excursion event. Refer to section 5.6.	No
		Variable Zone Capacity (VZC): if this bit is set to '1', then the capacity for a zone may change without a change to the format of the zoned namespace. If this bit is cleared to '0', then the capacity for a zone does not change without a change to the format of the zoned namespace. Refer to Figure 48.	
		Optional Zoned Command Support (OZCS): This field defines optional features of the zoned namespace.	
		Bits Description	
		15:2 Reserved	
03:02	0	2RWA Supported (ZRWASUP): If this bit is set to '1' then the namespace supports the ZRWA capability. If this bit is cleared to '0', then the namespace does not support the ZRWA capability. Refer to section 5.7.	No
		Read Across Zone Boundaries (RAZB): If this bit is set to '1', then any User Data Read Access Command is allowed to perform read operations that specify an LBA range containing logical blocks in more than one zone.	
		If this bit is cleared to '0', then any command that performs a read operation that specifies an LBA range containing logical blocks in more than one zone is aborted as defined in section 2.1.1.2.1.2.	
07:04	М	Maximum Active Resources (MAR): This field defines the maximum number of active zones in the zoned namespace. A value of FFFFFFFh indicates that there is no limit. This is a 0's based value	No
11:08	М	Maximum Open Resources (MOR): This field defines the maximum number of open zones in the zoned namespace. This field shall be less than or equal to the Maximum Active Resources field. A value of FFFFFFFh indicates that there is no limit. This is a 0's based value	No
15:12	0	Reset Recommended Limit (RRL): If the Reset Zone Recommended Time Limit field is set to 00b in the Zone Attributes Information field, then this field indicates the number of seconds before the NVM subsystem may perform a vendor specific action on a zone after the Reset Zone Recommended bit is set to '1' in the Zone Attributes field for that zone. If this field is cleared to 0h, then no limit is reported. Refer to section 5.4.	No
19:16	0	Finish Recommended Limit (FRL): If the Finish Zone Recommended Time Limit field is set to 00b in the Zone Attributes Information field, then this field indicates the number of seconds before the NVM subsystem may perform the vendor specific action on a zone after the Finish Zone Recommended bit is set to '1' in the Zone Attributes field for that zone. If this field is cleared to 0h, then no limit is reported. Refer to section 5.5.	No

Figure 59: I/O Command Set Specific Identify Namespace Data Structure for the Zoned Namespace Command Set

Bytes	о/м ¹	Description	Reported ²
23:20	0	Reset Recommended Limit 1 (RRL1): If the Reset Zone Recommended Time Limit field is set to 01b in the Zone Attributes Information field, then this field indicates the number of seconds before the NVM subsystem may perform a vendor specific action on a zone after the Reset Zone Recommended bit is set to '1' in the Zone Attributes field for that zone. If this field is cleared to 0h, then no limit is reported. Refer to section 5.4.	No
27:24	0	Reset Recommended Limit 2 (RRL2): If the Reset Zone Recommended Time Limit field is set to 10b in the Zone Attributes Information field, then this field indicates the number of seconds before the NVM subsystem may perform a vendor specific action on a zone after the Reset Zone Recommended bit is set to '1' in the Zone Attributes field for that zone. If this field is cleared to 0h, then no limit is reported. Refer to section 5.4.	No
31:28	0	Reset Recommended Limit 3 (RRL3): If the Reset Zone Recommended Time Limit field is set to 11b in the Zone Attributes Information field, then this field indicates the number of seconds before the NVM subsystem may perform a vendor specific action on a zone after the Reset Zone Recommended bit is set to '1' in the Zone Attributes field for that zone. If this field is cleared to 0h, then no limit is reported. Refer to section 5.4.	No
35:32	0	Finish Recommended Limit 1 (FRL1): If the Finish Zone Recommended Time Limit field is set to 01b in the Zone Attributes Information field, then this field indicates the number of seconds before the NVM subsystem may perform the vendor specific action on a zone after the Finish Zone Recommended bit is set to '1' in the Zone Attributes field for that zone. If this field is cleared to 0h, then no limit is reported. Refer to section 5.5.	No
39:36	0	Finish Recommended Limit 2 (FRL2): If the Finish Zone Recommended Time Limit field is set to 10b in the Zone Attributes Information field, then this field indicates the number of seconds before the NVM subsystem may perform the vendor specific action on a zone after the Finish Zone Recommended bit is set to '1' in the Zone Attributes field for that zone. If this field is cleared to 0h, then no limit is reported. Refer to section 5.5.	No
43:40	0	Finish Recommended Limit 3 (FRL3): If the Finish Zone Recommended Time Limit field is set to 11b in the Zone Attributes Information field, then this field indicates the number of seconds before the NVM subsystem may perform the vendor specific action on a zone after the Finish Zone Recommended bit is set to '1' in the Zone Attributes field for that zone. If this field is cleared to 0h, then no limit is reported. Refer to section 5.5.	No
47:44	0	Number of ZRWA Resources (NUMZRWA): This field indicates the total number of ZRWA resources in this namespace. Refer to section 5.7. This field is a 0's based value. If the ZRWA Supported bit is cleared to '0' in the OZCS field, then this field shall be ignored.	No
49:48	0	ZRWA Flush Granularity (ZRWAFG) : This field specifies the granularity of ZRWA Flush operations (refer to section 5.7.1) in logical blocks for this namespace. Unless otherwise specified, data shall be flushed from logical blocks in a ZRWA to its associated zone in integral multiples of the value in this field. If the ZRWA Supported bit is cleared to '0' in the OZCS field, then this field shall be cleared to 0h. This value may change if the namespace is reformatted.	No
51:50	0	ZRWA Size (ZRWASZ): This field indicates the total size in logical blocks of each ZRWA for this namespace. The value in this field shall be a multiple of the non-zero value of the ZRWA Flush Granularity (ZRWAFG) field. If the ZRWA Supported bit is cleared to '0' in the OZCS field, then this field shall be cleared to 0h. Refer to section 5.7. This value may change if the namespace is reformatted.	No

Figure 59: I/O Command Set Specific Identify Namespace Data Structure for the Zoned Namespace Command Set

Bytes	о/м ¹	Description	Reported ²
		ZRWA Capability (ZRWACAP): This field provides information about the ZRWA capability. If the ZRWA Supported bit is cleared to '0' in the OZCS field, then this field shall be cleared to 0h.	
50	0	Bits Description	NI-
52	0	7:1 Reserved	No
		0 Explicit Flush Support (EXPFLUSHSUP): If this bit is set to '1', then the controller supports explicit ZRWA Flush operations (refer to section 5.7.2). If this bit is cleared to '0', then the controller does not support explicit ZRWA Flush operations.	
2815:53		Reserved	
(ref	er to the l	LBA Format Extensions LBA Format List Structure section in the NVM Command Set Specificat	ion)
2831:2816	М	LBA Format 0 Extension (LBAFE0): This field indicates the LBA format Extension 0 that is supported by the controller. The LBA Format Extension field is defined in Figure 60.	Yes
2847:2832	0	LBA Format 1 Extension (LBAFE1): This field indicates the LBA format Extension 1 that is supported by the controller. The LBA Format Extension field is defined in Figure 60.	Yes
3839:3824	0	LBA Format 63 Extension (LBAFE63): This field indicates the LBA format Extension 63 that is supported by the controller. The LBA Format Extension field is defined in Figure 60.	Yes
4095:3840	0	Vendor Specific (VS)	No
	s fields th	= Optional, M = Mandatory. lat report information for the Identify command when querying the capabi	lities of LBA

Figure 60 defines the Identify LBA Format Extension data structure.

Figure 60: LBA Format Extension Data Structure

Bits	Description
127:72	Reserved
	Zone Descriptor Extension Size (ZDES): This field indicates the Zone Descriptor Extension size for
71:64	each zone. The value is reported in 64B units (e.g., 1h corresponds to 64B, 2h corresponds to 128B).
	A value of 0h indicates that Zone Descriptor Extensions are not supported. Refer to section 5.3.
63:00	Zone Size (ZSZE): This field contains the size of each zone in the zoned namespace. The value is
63.00	reported as a number of logical blocks. The value of the field shall not be cleared to 0h.

The LBA Format data structure in the NVM Command Set specific Identify Namespace data structure is as defined in the NVM Command Set Specification. That LBA Format data structure is extended through the LBA Format Extension data structure.

Commands (e.g., Format NVM and Namespace Management) that use the Format Index to refer to the LBA Format data structure in the NVM Command Set specific Identify Namespace data structure, shall use that same Format Index to refer to the LBA Format Extension data structure and shall process both the LBA Format data structure and LBA Format Extension data structure when an LBA Format is specified.

The host specified namespace management fields are as defined for the NVM Command Set.

4.1.5.2 I/O Command Set Specific Identify Controller Data Structure (CNS 06h, CSI 02h)

Figure 61 defines the I/O Command Set specific Identify Controller data structure for the Zoned Namespace Command Set.

Figure 61: I/O Command Set Specific Identify Controller Data Structure for the Zoned **Namespace Command Set**

Bytes	O/M ¹	Description			
-	27111	Zone Append Size Limit (ZASL): If the Zone Append command is supported then:			
00	02	 a) a non-zero value in this field indicates the maximum data transfer size for the Zone Append command (refer to section 3.4.1); and b) a value of 0h in this field indicates that the maximum data transfer size for the Zone Append command is indicated by the Maximum Data Transfer Size (MDTS) field (refer to the NVM Express Base Specification). 			
		The value is in units of the minimum memory page size (CAP.MPSMIN) and is reported as a power of two (2^n). This field includes the length of metadata if metadata is interleaved with the stored logical block data.			
		The value of this field shall be less than or equal to the Maximum Data Transfer Size (MDTS).			
03:01		Reserved			
		Zoned Controller Attributes (ZCTRATT): This field indicates attributes of the controller that support this command set.			
		Bits Description			
07.04	o 3	31:01 Reserved			
07:04	0 3	Zoned Namespace Resource Management (ZNRM): If this bit is set to '1', then the controller supports allocation of resources when creating a zoned namespace (refer to section 4.1.5.4). If this bit is cleared to '0', then the controller does not support allocation of resources when creating a zoned namespace.			
11:08	o 3	Total Active Resources (TAR): This field indicates the total number of active resources (i.e., allocated and unallocated active resources). If the ZNRM bit is cleared to '0', then this field should be ignored by the host.			
15:12	o 3	Unallocated Active Resources (UAR): This field indicates the number of unallocated active resources. If the ZNRM bit is cleared to '0', then this field should be ignored by the host.			
19:16	o 3	Total Open Resources (TOR): This field indicates the total number of open resources (i.e., allocated and unallocated open resources). If the ZNRM bit is cleared to '0', then this field should be ignored by the host.			
23:20	o 3	Unallocated Open Resources (UOR): This field indicates the number of unallocated open resources. If the ZNRM bit is cleared to '0', then this field should be ignored by the host.			
27:24	o 3	Total ZRWA Resources (TZRWAR): This field indicates the total number of ZRWA resources (i.e., allocated and unallocated ZRWA resources). If the ZNRM bit is cleared to '0', then this field should be ignored by the host.			
31:28	o 3	Unallocated ZRWA Resources (UZRWAR): This field indicates the number of unallocated ZRWA resources. If the ZNRM bit is cleared to '0', then this field should be ignored by the host.			
35:32	М	Version (VER): This field contains a Specification Version Descriptor (refer to the NVM Express Base Specification) indicating the version of this specification supported by the controller, as defined in Figure 62.			
4095:36		Reserved			
Notes:					

Published versions of this specification and the values that shall be reported by compliant controllers are defined in Figure 62.

O/M definition: O = Optional, M = Mandatory.

Mandatory for controllers that support the Zone Append command.

Figure 62: I/O Zoned Namespace Command Set Specification Version Descriptor Field Values

Specification Versions 1	MJR Field	MNR Field	TER Field			
1.0	1h	0h	0h			
1.1	1h	1h	0h			
1.2 1h 2h 0h						
Notes: 1. The specification version listed includes lettered versions (e.g., 1.1 includes 1.1, 1.1a, 1.1b, etc.).						

4.1.5.3 Identify I/O Command Set specific Namespace data structure (CNS 0Ah, CSI 02h)

An I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set (refer to Figure 59) is returned to the host for the Format Index specified by the CNS Specific Identifier field as defined in Figure 63. The returned I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set specifies fields that define capabilities used by a host to format or create a namespace. If the Format Index specified is valid, then the controller shall return an I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set that:

- for fields in Figure 63 that indicate "Yes" in the Reported column, conatin a value that is the same for all namespaces using the specified Format Index; and
- for fields in Figure 63 that indicate "No" in the Reported column, contain a value cleared to 0h.

Figure 63: Command Dword 11 - CNS Specific Identifier

Bits	Description
15:0	Format Index (FIDX): This field specifies the Format Index identifying the LBA Format capabilities
	that are to be returned. Refer to the NVM Command Set Specification.

4.1.5.4 Command Set Index Usage for the Zoned Namespace Command Set

The Zoned Namespace Command Set is an extension to the NVM Command Set as specified in section 1.1, Therefore, the CNS values defined by the NVM Command Set (i.e., 00h) and Zoned Namespace Command Set (i.e., 02h) are used by the host for the Zoned Namespace Command Set.

The following sections provide an example on how a host uses the CSI value 00h and CSI value 02h for accessing Identify Namespace data structures (refer to section 1.4.2.4) for a namespace associated with the Zoned Namespace Command Set.

4.1.5.4.1 Determining the Identify Command Information Associated with a Namespace

For a host to determine the Identify Namespace Data Structures (refer to section 1.4.2.4) for a namespace associated with the Zoned Namespace Command Set, the host is required to issue the following Identify commands in any order:

- a) An Identify command with:
 - a. the CNS field set to 08h; and
 - b. the NSID field set to the NSID of the namespace,

to access the I/O Command Set Independent Identify Namespace data structure (refer to the NVM Express Base Specification);

- b) An Identify command with:
 - a. the CNS field set to 00h; and
 - b. the NSID field set to the NSID of the namespace,

to access the Identify Namespace data structure (refer to the NVM Command Set Specification);

- c) An Identify command with:
 - a. the CNS field set to 05h;

- b. the CSI field set to 00h; and
- c. the NSID field set to the NSID of the namespace,

to access the I/O Command Set specific Identify Namespace data structure for the NVM Command Set (refer to the NVM Command Set Specification); and

- d) An Identify command with:
 - a. the CNS field set to 05h;
 - b. the CSI field set to 02h; and
 - c. the NSID field set to the NSID of the namespace,

to access the I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set (refer to section 4.1.5.1).

4.1.5.4.2 Determining the Identify Command Information Associated with a Format Index

For a host to determine the Identify Namespace Data Structures associated with a specific Format Index (i.e., determining information about a namespace associated with the Zoned Namespace Command Set prior to creating that namespace), the host is required to issue the following Identify commands in any order:

- a) An Identify command with:
 - a. the CNS field set to 08h; and
 - b. the NSID field set to FFFFFFFh,

to access the I/O Command Set Independent Identify Namespace data structure (refer to the NVM Express Base Specification);

- b) An Identify command with:
 - a. the CNS field set to 09h;
 - b. the CSI field set to 00h;
 - c. the NSID field set to 0h; and
 - d. the CNS Specific Identifier field set to the Format Index,

to access the Identify Namespace data structure (refer to the NVM Command Set Specification);

- c) An Identify command with:
 - a. the CNS field set to 0Ah;
 - b. the CSI field set to 00h;
 - c. the NSID field set to 0h; and
 - d. the CNS Specific Identifier field set to the Format Index,

to access the I/O Command Set specific Identify Namespace data structure for the NVM Command Set (refer to the NVM Command Set Specification); and

- d) An Identify command with:
 - a. the CNS field set to 0Ah:
 - b. the CSI field set to 02h;
 - c. the NSID field set to 0h; and
 - d. the CNS Specific Identifier field set to the Format Index,

to access the I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set (refer to section 4.1.5.3).

4.1.6 Namespace Management command

The Namespace Management command operates as defined in the NVM Command Set Specification with the following changes:

 The addition that the Format Index (refer to section 1.4.2.2) also specifies the entry in the LBA Format Extensions list (refer to Figure 59) for zone attributes used to format a created namespace. The Host Software Specified Fields data structure for the Zoned Namespace Command Set is defined in Figure 64.

The Namespace Management command will also operate with the following additional definitions:

- If the value in the RAR field is greater than the value specified in the UAR field (refer to Figure 61), then the controller shall abort the command with a status code of Invalid Field in Command.
- If the value in the ROR field is greater than the value specified in the UOR field (refer to Figure 61), then the controller shall abort the command with a status code of Invalid Field in Command.
- If the value in the RNUMZRWA field is greater than the value specified in the UZRWAR field (refer to Figure 61), then the controller shall abort the command with a status code of Invalid Field in Command.
- If the values in the MAR field, MOR field, and NUMZRWA field (refer to Figure 59) do not meet the requirements specified in section 2.1.1.4, then the controller shall abort the command with a status code of Invalid Namespace or Format.

After successful creation of a namespace, the resource allocated to the namespace are reflected in the Unallocated Active Resources, Unallocated Open Resources and in the Unallocated ZRWA Resources fields.

Figure 64: I/O Namespace Management - Host Software Specific Fields

Bytes	Descrip	Description					
	Fields that are a subset of the Identify Namespace data structure						
383:00	383:00 Refer to the NVM Command Set Specification						
	Fields that are not a subset of the Identify Namespace data structure						
498:384							
	Fields that are not a subset of the Identify Namespace data structure						
	Zoned Namespace Create Options (ZNSCO):						
	Bits	Description					
	07:01	Reserved					
499	00	Allocate ZRWA Resources (AZR): If this bit is set to '1', then the namespace is to be created with the number of ZRWA resource specified in the RNUMZRWA field of this data structure. If this bit is cleared to '0', then no ZRWA resources are allocated to the namespace to be created.	Yes				
		If the ZRWASUP bit is cleared to '0' (refer to Figure 59), then this bit shall be ignored by the controller.					
	-	ted Active Resources (RAR) ¹ : This field specifies the number of active is to be allocated to the created namespace.					
	allocated	of 00000000h specifies the number of Active resources requested to be I to the namespace is vendor specific and that number is reflected in the d in the I/O Command Set specific Identify Namespace data structure.					
503:500	requeste	of 00000001h to FFFFFFFEh specify the number of Active resources d to be allocated is as defined in section 2.1.1.4 and that number is in the MAR field in the I/O Command Set specific Identify Namespace cture.	Yes				
	allocated	of FFFFFFFh specifies the number of Active resources requested to be to the namespace is not limited and that number is reflected in the MAR are I/O Command Set specific Identify Namespace data structure.					

Figure 64: I/O Namespace Management – Host Software Specific Fields

Bytes	Description	Host Specified
	Fields that are a subset of the Identify Namespace data structure	
	Requested Open Resources (ROR) ¹ : This field specifies the number of open resources to be allocated to the created namespace.	
	A value of 00000000h specifies the number of Open resources requested to be allocated to the namespace is vendor specific and that number is reflected in the MOR field in the I/O Command Set specific Identify Namespace data structure.	
507:504	Values of 00000001h to FFFFFFEh specify the number of Open resources requested to be allocated is as defined in section 2.1.1.4 and that number is reflected in the MOR field in the I/O Command Set specific Identify Namespace data structure.	Yes
	A value of FFFFFFFh specifies the number of Open resources requested to be allocated to the namespace is not limited and that number is reflected in the MOR field in the I/O Command Set specific Identify Namespace data structure.	
	Requested Number of ZRWA Resources (RNUMZRWA) ¹ : This field specifies the number of ZRWA resources to be allocated to the created namespace.	
	A value of 00000000h specifies the number of ZRWA resources requested to be allocated to the namespace is vendor specific and that number is reflected in the NUMZRWA field in the I/O Command Set specific Identify Namespace data structure.	
511:508	Values of 00000001h to FFFFFFFh specify the number of ZRWA resources requested to be allocated is as defined in section 2.1.1.4 and that number is reflected in the NUMZRWA field in the I/O Command Set specific Identify Namespace data structure.	Yes
	A value of FFFFFFFF specifies the number of ZRWA resources requested to be allocated to the namespace is not limited and that number is reflected in the NUMZRWA field in the I/O Command Set specific Identify Namespace data structure.	
4095:512	Reserved	-

Notes:

4.1.6.1 Command Completion

When the command is completed, the controller posts a completion queue entry to the Admin Completion Queue indicating the status for the command.

After successful completion of a Namespace Management command with the create operation, the number of resources allocated with the value requested in the RAR field, may be reflected by a change in the UAR field in the Identify Controller data structure by one or more controllers.

After successful completion of a Namespace Management command with the create operation, the number of resources allocated with the value requested in the ROR field, may be reflected by a change in the UOR field in the Identify Controller data structure by one or more controllers.

After successful completion of a Namespace Management command with the create operation, the number of resources allocated with the value requested in the RNUMZRWAS field, may be reflected by a change in the UZRWAR field in the Identify Controller data structure by one or more controllers.

4.1.7 Sanitize command

The Sanitize command operates as defined in the NVM Express Base Specification, with additional requirements for controllers implementing the Zoned Namespace Command Set defined in this section.

The Sanitize Status (SSTAT) (refer to Sanitize Status (Log Page Identifier 81h) section in the NVM Express Base Specification) and resultant zone state as a result of a successful sanitize operation of a zoned namespace that supports the Zoned Namespace Command Set are defined in Figure 65.

All fields of the Sanitize command are as defined in the NVM Express Base Specification.

^{1.} If Zoned Namespace Resource Management (refer to the ZNRM bit in Figure 61) is not supported, then this field is ignored by the controller.

The resulting zone state and event to report as a result of a successful sanitize operation is dependent on the setting of the:

- a) No Deallocate After Sanitize bit in the Sanitize command that requested the sanitize operation;
- b) No-Deallocate Modifies Media After Sanitize field;
- c) No-Deallocate Inhibited bit;
- d) No-Deallocate Response Mode bit; and
- e) Sanitize Action field.

Figure 65: Sanitize Behavior for the Zoned Namespace Command Set

No	No-Deallocate No- No-Deallocate			Results	of a successful sa	nitize operation
Deallocate After Sanitize	Modifies Media After Sanitize (NODMMAS)	Deallocate Inhibited (NDI)	Response Mode (NODRM)	Zone State ¹	Logical Block Content ²	Sanitize Status ⁴
0b	n/a ³	n/a ³	n/a ³	ZSE:Empty	Refer to section 2.1.1.2.1.2	001b
1b	00b	0b	n/a ³	ZSE:Empty	Refer to section 2.1.1.2.1.2	001b
1b	00b	1b	0b			n/a ⁵
1b	00b	1b	1b	ZSE:Empty	Refer to section 2.1.1.2.1.2	001b
1b	01b (does not modify)	0b (not inhibited)	n/a ³	ZSF:Full	Note 6	001b
1b	01b	1b (inhibited)	1b	ZSE:Empty	Refer to section 2.1.1.2.1.2	100b
1b	01b	1b	0b			n/a ⁵
1b	10b (does modify)	0b	n/a ³	ZSF:Full	Note 6	001b
1b	10b	1b	1b	ZSE:Empty	Refer to section 2.1.1.2.1.2	100b
1b	10b	1b	0b			n/a ⁵
n/a ³	11b	n/a ³	n/a ³		Reserved	

Notes:

- 1. ZSO:Offline state is a valid zone state as a result of a successful sanitize operation.
- 2. This field describes the read value from a deallocated logical block. Refer to the Deallocated or Unwritten Logical Blocks section in the NVM Command Set Specification.
- 3. This value is not relevant in the setup conditions defined in that row.
- 4. Value reported in the Sanitize Operation Status (SOS) field of the Sanitize Status (SSTAT) field in the Sanitize Status log page (Log Page Identifier 81h) (refer to the NVM Express Base Specification).
- 5. Sanitize command is aborted with a status code of Invalid Field in Command.
- 6. Block Erase and Crypto Erase are not defined in this specification; Overwrite shall be the overwrite pattern specified in the Sanitize command that requested the sanitize operation.

4.2 I/O Command Set Specific Admin commands

The I/O command set specific Admin commands are as defined in the NVM Express Base Specification and in the NVM Command Set Specification.

5 Extended Capabilities

5.1 Reservations

Reservations operate as defined the NVM Express Base Specification and the NVM Command Set Specification, with the additional Command Behavior in the Presence of a Reservation defined in Figure 66.

Figure 66: Command Behavior in the Presence of a Reservation

NVMe Command	Exc	rite lusive rvation Registrant	Acc	usive cess vation Registrant	Write Exclusive Registrants Only or Write Exclusive All Registrants Reservation Non-Registrant		Exclusive Access Registrants Only or Exclusive Access All Registrants Reservation Non- Registrant egistrant	
	Zone	d Namesp	ace Reac	Comman				
Zone Management Receive	Α	Α	С	С	Α	Α	С	Α
Ţ.								
Zoned Namespace Write Command Group								
Zone Append Zone Management Send	С	С	С	С	С	А	С	А

Kev:

A definition: A=Allowed, command processed normally by the controller

C definition: C=Conflict, command aborted by the controller with a status code of status Reservation Conflict

5.2 Directives

Support for Directives is as defined the NVM Command Set Specification.

5.3 Zone Descriptor Extension

The Zone Descriptor Extension feature allows a host to associate a small amount of data (e.g., UUID) to a zone. The data is attached to a zone as a Zone Descriptor Extension and is able to be accessed by issuing a Zone Management Receive command with a Zone Receive Action of Extended Report Zones (refer to section 3.4.2.2.2) and specifying that zone. The host may read the Zone Descriptor Extension Valid bit in the Zone Attributes field of that zone to determine if that zone has data associated.

A Zone Descriptor Extension is associated with a zone when the zone is transitioned from the ZSE:Empty state to the ZSC:Closed state as a result of a Zone Management Send command with Zone Send Action of Set Zone Descriptor Extension that specifies that zone and the data to associate in the data buffer (refer to section 3.4.3.1.7).

Upon successful completion of the Zone Management Receive command:

- a) the data in the data buffer is associated with the Zone Descriptor Extension of that zone; and
- b) the Zone Descriptor Extension Valid bit in the Zone Attributes field of that zone is set '1'.

When data has been associated with a Zone Descriptor Extension, the data is associated until:

- a) that zone transitions to the ZSE:Empty state or the ZSO:Offline state; and
- b) the Zone Descriptor Extension Valid bit in the Zone Attributes field of that zone is cleared to '0'.

5.4 Reset Zone Recommended

A controller that schedules an internal operation (e.g., background operation on the non-volatile medium) on a zone that is in the ZSF:Full state may notify host software to initiate a zone reset operation

(refer to section 3.4.3.1.4.1). If a controller schedules such an internal operation on a zone, the controller may notify the host by:

- a) setting the Reset Zone Recommended bit to '1' in the Zone Attributes field of the specific zone (refer to Figure 48):
- setting the Reset Zone Recommended Time Limit field in the Zone Attributes Information field to indicate the number of seconds before the controller intends to perform an internal operation on the specified zone; and
- c) generating a Zone Descriptor Changed event for the specific zone.

As a zone reset operation destroys data in a specific zone, it is optional for the host software to perform a zone reset operation on zones that have the Reset Zone Recommended bit set to '1' in the Zone Attributes field. If the host does not perform a zone reset operation on the specific zone, then the internal operation, which may impact performance, may be performed.

If the controller has processed the internal operation or the internal operation is no longer scheduled, the controller may notify the host by:

- a) clearing the Reset Zone Recommended bit to '0' in the Zone Attributes field of the specific zone;
 and
- b) generating a Zone Descriptor Changed event for the specific zone.

If a zone is in the ZSF:Read Only state or the ZSF:Offline state, then the Reset Zone Recommended attribute shall be cleared to '0'.

5.5 Finish Zone Recommended

A controller that schedules an internal operation (e.g., background operation on the non-volatile medium) on a zone that is in the:

- a) ZSIO:Implicitly Opened state:
- b) ZSEO:Explicitly Opened state; or
- c) ZSC:Closed state

may notify host software to either:

- a) initiate a zone finish operation (refer to section 3.4.3.1.2) on that zone; or
- b) initiate write operations to that zone such that the zone transitions to the ZSF:Full state.

The operation initiated by the host may enable the controller to cancel the scheduled internal operation.

The controller may notify the host software by:

- a) setting the Finish Zone Recommended bit to '1' in the Zone Attributes field of the specific zone (refer to Figure 48);
- b) setting the Finish Zone Recommended Time Limit field in the Zone Attributes Information field to indicate the number of seconds before the controller intends to perform an internal operation on the specified zone; and
- c) generating a Zone Descriptor Changed event for the specific zone.

It is optional for the host software to process the above mitigating actions on zones that have the Finish Zone Recommended bit set to '1' in the Zone Attributes field. If the host does not perform the mitigating actions on the specific zone, then the internal operation, which may impact performance, may be performed.

If the controller has processed the internal operation or the internal operation is no longer scheduled, the controller may notify the host by:

- a) clearing the Finish Zone Recommended bit to '0' in the Zone Attributes field of the specific zone;
 and
- b) generating a Zone Descriptor Changed event for the specific zone.

If a zone is in the ZSF:Read Only state or the ZSF:Offline state, then the controller shall clear the Finish Zone Recommended bit to '0' in the Zone Attributes field.

5.6 Zone Active Excursions

A Zone Active Excursion is a vendor specific action on a zone that is in the:

- a) ZSIO:Implicitly Opened state;
- b) ZSEO:Explicitly Opened state; or
- c) ZSC:Closed state,

and transitions the zone to the ZSF:Full state. A Zone Active Excursion is orthogonal to the Finish Zone Recommended feature (refer to section 5.5), and can occur at any point when a zone has transitioned to one of the listed zone states. If the controller performs a Zone Active Excursion on such a zone, then the controller shall notify the host by:

- a) setting the Zone Finished by Controller bit to '1' in the Zone Attributes field of that zone (refer to Figure 48); and
- b) generating a Zone Descriptor Changed event for that zone.

If a zone is in the ZSF:Read Only state or the ZSF:Offline state, then the controller shall clear the Zone Finished by Controller bit to '0' in the Zone Attributes field.

5.7 Zone Random Write Area

A ZRWA may be thought of as being analogous to a type of non-volatile cache.

Support for ZRWA is optional. If assignment of a ZRWA to a zone is supported, then the ZRWASUP bit shall be set to '1' in the OZCS field in the I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set. If the ZRWASUP bit is cleared to '0', then assignment of a ZRWA to a zone in the specified namespace is not supported.

The Zone Random Write Area Size (ZRWASZ) field (refer to Figure 8) indicates the size of the ZRWA in logical blocks. The lowest-numbered LBA of the ZRWA is the write pointer of the zone with which the ZRWA is associated. The highest-numbered LBA of the ZRWA is the write pointer of the zone with which the ZRWA is associated plus ZRWASZ minus 1. For a given zone, a ZRWA of size n ends at (write pointer + n - 1). ZRWASZ shall be a multiple of ZRWA Flush Granularity (ZRWAFG) (refer to Figure 8), as shown in Figure 67.

The ZRWA advances when the write pointer advances.

ZSLBA WP ZRWAFG

ZRWA

ZRWA

ZRWASZ unwritten LBAs

ZCAP

Figure 67: Write Pointer in a Partially Written Zone with Associated ZRWA

A ZRWA is allocated to a zone using the Zone Send Management command with a Zone Send Action of Open Zone or Set Zone Descriptor Extension. Allocating a ZRWA to a zone creates an association between the ZRWA and that zone. A ZRWA is associated with at most one zone at a time.

A ZRWA remains associated with a zone until that zone transitions to the ZSF:Full state, ZSE:Empty state, ZSRO:Read Only state, or ZSO:Offline state. A transition to the ZSF:Full state, ZSE:Empty state, ZSRO:Read Only state, or ZSO:Offline state terminates the association, releases the ZRWA associated with that zone, and increases the number of ZRWA resources available for allocation by 1 (refer to the Number of ZRWA Resources field in the I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set).

For a zone that is associated with a ZRWA:

- a) logical blocks within the ZRWA are not required to be written sequentially; a host may write data to logical block addresses within the ZRWA in any order;
- b) the Starting LBA for an Address-Specific Write Command to the ZRWA is required to be greater than or equal to the write pointer of the zone;

- c) the host is not limited to a single outstanding Address-Specific Write Command at one time to the ZRWA; and
- d) the host may overwrite logical blocks in the ZRWA.

If a zone is associated with a ZRWA, then any Address-Specific Write Command that attempts to address an LBA that is less than the write pointer of that zone shall be aborted with a status code of Invalid Zone Write.

A ZRWA Flush operation (refer to section 5.7.1) is used to flush logical blocks and metadata from a ZRWA to the zone associated with that ZRWA.

The controller shall perform a ZRWA Flush operation prior to transitioning that zone to the ZSF:Full or ZSRO:Read Only state.

Address-Specific Write Commands to logical block addresses in a ZRWA do not cause the associated zones' write pointer to be updated unless that Address-Specific Write Command causes an implicit ZRWA Flush operation to occur.

If a Zone Append command is received for a zone while that zone is associated with a ZRWA, then the controller shall abort the command as described in section 3.4.1.

All writes that start within the ZRWA or the IZFR (refer to section 5.7.3) are allowed to specify LBAs up to the end of the writeable capacity of the zone.

The coordination of host usage of ZRWAs associated with shared namespaces is outside the scope of this specification.

5.7.1 ZRWA Flush Operations

A ZRWA Flush operation flushes user data from a ZRWA (refer to section 1.4.4.10) to a zone and advances the write pointer as described in section 5.7.3. There is a one to one mapping between the source LBA in the ZRWA and the implied destination LBA in the associated zone. Logical blocks which have been flushed are not able to be written again until the zone transitions to the ZSE:Empty state.

When a ZRWA Flush operation that affects a logical block occurs, if that logical block is unwritten, then that logical block is flushed to the zone as an unwritten logical block (refer to section Deallocated or Unwritten Logical Blocks in the NVM Command Set Specification).


ZRWA Flush operations may be explicit or implicit. Both explicit and implicit ZRWA Flush operations:

- a) flush logical blocks in multiples of ZRWA Flush Granularity (ZRWAFG) from the ZRWA to the zone; and
- b) advance the write pointer by the number of logical blocks flushed to the zone in step a).

When an explicit ZRWA Flush operation flushes the logical block that causes the zone to reach its writeable zone capacity, the zone shall transition to the ZSF:Full state.

Figure 68 shows the effects of a ZRWA Flush operation on the write pointer and the mapping of the ZRWA to the logical blocks in the zone.

Figure 68: Flush Operation

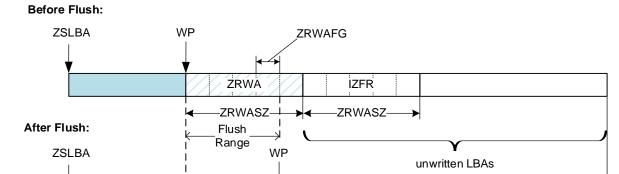

If the ZRWA is at the end of the zone (i.e., WP >= ZCAP - ZRWASZ; refer to Figure 69), then there is no IZFR (refer to section 5.7.3) and implicit ZRWA Flush operations do not occur. If the ZRWA is at the end of the zone, to initiate a ZRWA Flush, host software should send a Zone Management Send command specifying either:

ZRWA

ZRWASZ-

-ZCAP-

IZFR

ZRWASZ-

unwritten LBAs

a) a Zone Send Action of Finish Zone; or

written LBAs

b) a Zone Send Action of Flush Explicit ZRWA Range.

ZSLBA WP ZRWAFG

ZRWA

ZRWA

ZRWASZ

Written LBAs

Figure 69: ZRWA at End of Zone

For a namespace that is able to support a ZRWA, the ZCAP field for all zones on that namespace shall be set to a value that is an integral multiple of ZRWAFG.

5.7.2 Explicit ZRWA Flush

An explicit ZRWA Flush operation is performed when a Zone Send Management command with the Zone Send Action field set to Flush Explicit ZRWA Range (refer to section 3.4.3.1.3) completes successfully. The EXPFLUSHSUP bit shall be set to '1' in the I/O Command Set specific Identify Namespace data structure for the Zoned Namespace Command Set if the Flush Explicit ZRWA Range Zone Send Action is supported.

5.7.3 Implicit ZRWA Flush

As a result of an Address-Specific Write Command, multiple implicit ZRWA Flush operations may occur. If one or more implicit ZRWA Flush operations occur as a result of a given Address-Specific Write Command, then at the completion of that Address-Specific Write Command, the write pointer has been updated and all logical blocks up to the new write pointer have been flushed to the associated zone.

The range of logical blocks that starts at the first logical block beyond the end of the ZRWA and is the same size as the ZRWA (ZRWASZ) is called the Implicit ZRWA Flush Range (IZFR) as shown in Figure 70.

Figure 70: Implicit ZRWA Flush Range

Start of Implicit ZRWA Flush Range	End of Implicit ZRWA Flush Range
Write Pointer + ZRWA Size	Write Pointer + (2 * ZRWA Size) – 1

The controller performs an implicit ZRWA Flush when the controller processes an Address-Specific Write Command that specifies one or more logical blocks in the IZFR.

The variables in Figure 71 are used to describe an implicit ZRWA Flush operation.

Figure 71: Implicit ZRWA Flush Variables

Variable	Definition
New_WP	New Write Pointer
WP	Initial Write Pointer
IZFR_Start_LBA	Start of IZFR (i.e., WP + ZRWASZ)
Last_LBA	Ending LBA in Write Operation
FG	ZRWA Flush Granularity (ZRWAFG)

The range of LBAs flushed by an implicit ZRWA Flush operation begins with the write pointer. The number of logical blocks flushed is an integral multiple of the ZRWAFG and is at least one times ZRWAFG.

If an implicit ZRWA Flush operation occurs, then the value of the write pointer is determined by the following formula:

if
$$\left(\left(Last_LBA - IZFR_Start_LBA \right) \ mod \ FG \right) > 0$$
 then
$$New_WP = WP + Ceiling \left(\frac{Last_LBA - IZFR_Start_LBA}{FG} \right) * FG$$
 else
$$New_WP = WP + \left(Ceiling \left(\frac{Last_LBA - IZFR_Start_LBA}{FG} \right) + 1 \right) * FG$$

If an Address-Specific Write Command specifies a Starting LBA that is greater than or equal to \(\begin{align*} \int \mathbb{Z}FR_\text{Start}_\text{LBA} + \mathbb{Z}\text{RWASZ} \) (i.e., the first LBA after the IZFR) then the controller shall abort that command with a status code of Zone Invalid Write, and shall not perform any implicit ZRWA Flush operations.

If an implicit ZRWA Flush operation is to be performed, then that implicit ZRWA Flush operation shall be performed whether or not the Address-Specific Write Command completes successfully.

5.8 Sanitize Operations

If the NVM subsystem is in the Media Verification state (refer to the Sanitize Operations section of the NVM Express Base Specification), then the logical block content is described in the Media Verification section of the NVM Express NVM Command Set Specification.

Annex A. Zoned Namespaces Host Considerations (Normative)

A.1 Introduction

The Zoned Namespace Command Set defines host management requirements in addition to those defined in the NVM Command Set.

To facilitate better interactions between hosts and NVM subsystems, this annex describes the Zoned Namespaces feature from a host perspective.

A.2 Writing to Zones

In a Sequential Write Required zone, writes to a zone are required to start at the valid write pointer address if a ZRWA is not associated with a zone. Refer to section 5.7 for more details.

A.3 Open Zone Considerations

A.3.1 Overview

Each zone that is in either the ZSIO:Implicitly Opened state or the ZSEO:Explicitly Opened state has both Active Resources and Open Resources associated. Limitations on the availability of Active Resources and Open Resources and the number of zones allowed in these zone states are indicated by the Maximum Open Resources field and the Maximum Active Resources field.

Each zone that is in the ZSC:Closed state has only Active Resources associated. Availability of Active Resources and the number of zones allowed in this zone state are indicated by the Maximum Active Resources field.

If a write operation is processed on LBAs in a zone in the ZSE:Empty state or the ZSC:Closed state, then that zone shall be managed as if that zone is requested to transition to the ZSIO:Implicitly Opened state and shall account for Active Resources and Open Resources as defined in section 2.1.1.2.

A zone remains in the ZSIO:Implicitly Opened state or the ZSEO:Explicitly Opened state until:

- a) a write operation is processed for this zone that causes the zone to reach its zone capacity;
- b) the zone state is ZSIO:Implicitly Opened state, and the zone is selected by the controller (which zone is selected is vendor specific) to transition to the ZSC:Closed state:
- c) a Zone Management Send command with Zone Send Action of Finish Zone is issued to the zone:
- d) a Zone Management Send command with Zone Send Action of Reset Zone is issued to the zone:
- e) a Zone Management Send command with Zone Send Action of Close Zone is issued to the zone:
- f) the controller transitions the state of the zone to the ZSRO:Read Only state or the ZSO:Offline state:
- g) the controller transitions the zone to the ZSF:Full state due to a Zone Active Excursion; and
- h) an NVM Subsystem Reset occurs (refer to the Resets section of the NVM Express Base Specification).

A.3.2 Zones in the ZSEO:Explicitly Opened Zones and the ZSIO:Implicitly Opened states

An open zone is a zone that is in either the ZSIO:Implicitly Opened state or the ZSEO:Explicitly Opened state. For a zone that is in either the ZSE:Empty state or ZSC:Closed state, the controller transitions that zone to:

- a) ZSEO:Explicitly Opened state as a result of processing a Zone Management Send command with Zone Send Action of Open Zone; or
- b) ZSIO:Implicitly Opened state as a result of processing a write operation.

If a controller processes a Zone Management Send command with Zone Send Action of Open Zone on a zone in the ZSC:Closed state, then the controller transitions that zone to the ZSEO:Explicitly Opened state.

For resource management purposes, the controller may transition a zone in the ZSIO:Implicitly Opened state to the ZSC:Closed state in order to move the active resource associated with that zone to a different zone that is transitioning into the ZSIO:Implicitly Opened state.

A.3.3 Opening and Closing Zones

A host may use the following techniques to open a zone for writing and following that to close that zone:

- a) Issue a Zone Management Send command with Zone Send Action of Open Zone to transition a zone to the ZSEO:Explicitly Opened state, and following that the host may issue a Zone Management Send command with Zone Send Action of Close Zone to transition that zone to the ZSC:Closed state; or
- b) Issue a write operation to open a zone, and following that the host may issue a Zone Management Send command with Zone Send Action of Close Zone to transition that zone to the ZSC:Closed state.

The controller may autonomously transition any zone from the ZSIO:Implicitly Opened state to the ZSC:Closed state.

A host may use multiple Zone Management Send commands with Zone Send Action of Close Zone to close more zones than the number necessary to satisfy limitations on the number of zones that may be open.

A.3.4 Zone Send Action of Finish Zone Considerations

A zone may be opened (e.g., with a Zone Management Send command with Zone Send Action of Open Zone) prior to processing a Zone Management Send command with Zone Send Action of Finish Zone.

Regardless of how a zone is opened before processing a Zone Management Send command with Zone Send Action of Finish Zone, completion of the command transitions the zone to the ZSF:Full state, with the result that Active and Open Resources become available.

A.4 Partial Failures

A.4.1 Overview

The zone state ZSRO:Read Only provides the ability for a host to continue using a zoned namespace after part of the capacity of the zone has stopped operating (e.g., the controller transitions a zone to the ZSRO:Read Only state as a response to a media failure).

After a zone enters the ZSRO:Read Only state, the host should perform the following actions:

- 1) Transfer the data from that zone to another location (e.g., by using the Copy command); and
- 2) Transition that zone to the ZSO:Offline state by issuing a Zone Management Send command with a Zone Send Action of Offline Zone.

A.5 Capacity and Sizes

There are several data structures involved in size and capacity reporting:

Figure 72: Size and Capacity Fields

Data Structure	Field	Bytes	Description
	Namespace Size (NSZE)	7:0	(NSZE-1) indicates the highest possible LBA in the zoned namespace
Identify Namespace Data	Namespace Capacity (NCAP)	15:8	The maximum number of allocatable logical blocks in the zoned namespace
Structure, NVM Command Set	Formatted LBA Size (FLBAS)	26	Index into the list of LBA formats. Refer to the NVM Command Set Specification.
(CNS 00h)	LBA Format XX (LBAFXX)		LBADS field indicates the logical block data size (in bytes) (as a power of 2). MS field indicates the metadata size (in bytes).
Zoned Namespace Command Set specific Identify Namespace	LBA Format Extension XX (LBAFEXX)	3839:2816	ZDES indicates the size of the Zone Descriptor Extension (as a multiple of 64 bytes). ZSZE indicates the number of logical blocks of each zone of the zoned namespace.

Figure 72: Size and Capacity Fields

Data Structure	Field	Bytes	Description
Zone Descriptor	Zone Capacity	15:8	Indicates the maximum number of logical blocks that may
Zone Descriptor	(ZCAP)	13.0	be written in the zone associated with the data descriptor.

A zone has a size (ZSZE) and a capacity (ZCAP) that are related to optional support for the variable zone capacity feature. ZCAP may change as a result of resetting the write pointer. Refer to Figure 73.

A zone transitions to the ZSF:Full after successful completion of a write operation that includes LBA = $(ZSLBA + ZCAP_{CURRENT} - 1)$, in addition to other events (e.g., successful completion of a Zone Management Send command with a Zone Send Action of Finish Zone).

NSZE (logical blocks)

Zone 0

Zone 1

Zone x

LBA = NSZE-1

Zone x

LBA = NSZE-1

Zone x

a Zone Start LBA (ZSLBA)

Z = highest LBA in the zone = (ZSLBA + ZCAP - 1) (for the purpose of determining FULL status)

If ZCAP is less than ZSZE, the LBAs from offset ZCAP to offset ZSZE-1 are in the zone, behave like deallocated blocks when read, and are not allowed to be written.

Figure 73: Zone Size Relationships